COMMERCIAL A-35

INSTALLATION INSTRUCTIONS C-3535-DM

Prepare Valve for Installation:

- 1. Make sure that valve spool and valve face is free of any foreign particles.
- 2. Remove two capscrews holding spring cover on valve housing (discard cover).
- 3. Remove shoulder bolt holding spring cups and spring. Discard bolt, spring cups, spring, and round steel washer (Note: Teflon backup ring and O-ring must remain on valve spool).

Installation of Cylinder:

- 1. Cylinder does not have to be disassembled to install.
- 2. Apply loctite to threaded portion of valve spool.
- 3. Secure cylinder to valve spool by using a 3/16" hex wrench in rear fitting port of cylinder. Tighten firmly by holding spool on opposing end.
- 4. Secure cylinder housing to valve housing by using a 1/4" hex wrench.
- 5. Test for proper alignment by turning valve spool with the 3/16" hex wrench. Valve spool should rotate freely.
- 6. Install fittings and airlines and test for proper operation.