PRINCE DS-4A1E

INSTALLATION INSTRUCTIONS C-3552-DM

Prepare Valve for Installation:

- 1. Make sure that valve spool and valve face are free of any foreign particles.
- 2. Remove four capscrew holding cover on valve housing. (discard cover)

Installation of Cylinder:

- 1. Cylinder does not have to be disassembled to install.
- 2. Apply loctite to threaded portion of valve spool.
- 3. Secure cylinder to valve spool by using a 3/16" hex wrench in rear fitting port of cylinder. Tighten firmly by holding spool on opposing end.
- 4. Using a 3/16" hex wrench secure cylinder housing to valve housing with four capscrews.
- 5. Test for proper alignment by turning valve spool with the 3/16" hex wrench. Valve spool should rotate freely.
- 6. Install fittings and air lines and test for proper operation.

C-3552-DM Rev. -Approved 7-29-04 Ken Thompson