


Effective: HY25-1380-M1/US August 2024
Supersedes: HY25-1380-M1/US June 2024



Power Take-Offs Owner's Manual

267, 281, 288, 871, 878 Series

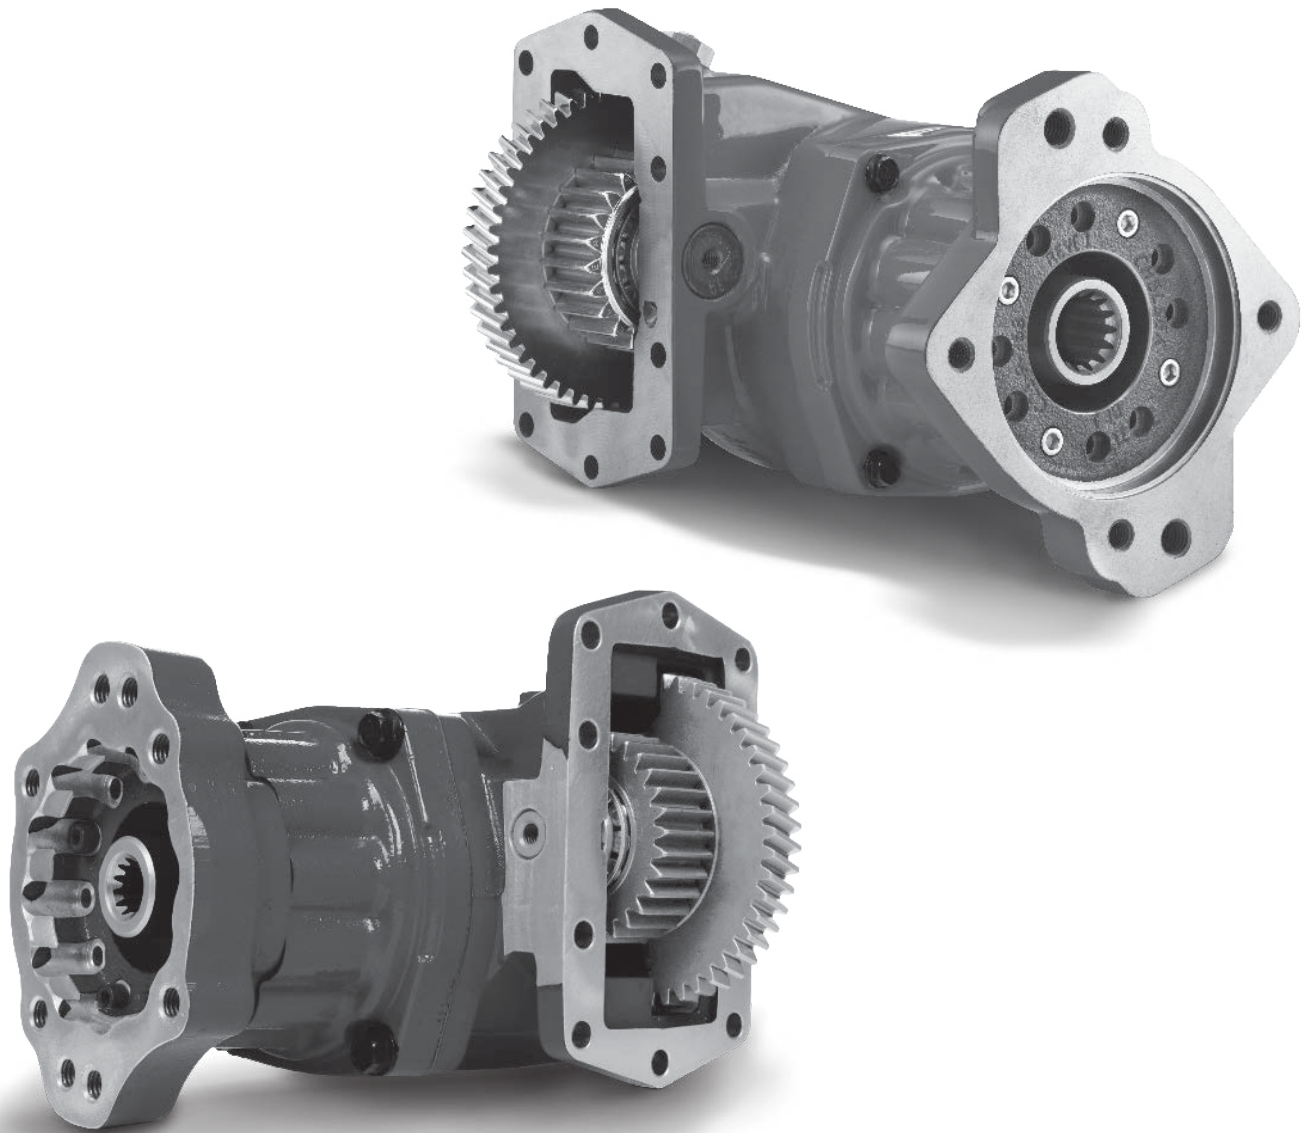

ENGINEERING YOUR SUCCESS.



WARNING – User Responsibility

FAILURE OR IMPROPER SELECTION OR IMPROPER USE OF THE PRODUCTS DESCRIBED HEREIN OR RELATED ITEMS CAN CAUSE DEATH, PERSONAL INJURY AND PROPERTY DAMAGE.

This document and other information from Parker Hannifin Corporation, its subsidiaries and authorized distributors provide product or system options for further investigation by users having technical expertise.

The user, through its own analysis and testing, is solely responsible for making the final selection of the system and components and assuring that all performance, endurance, maintenance, safety and warning requirements of the application are met. The user must analyze all aspects of the application, follow applicable industry standards, and follow the information concerning the product in the current product catalog and in any other materials provided from Parker or its subsidiaries or authorized distributors.

To the extent that Parker or its subsidiaries or authorized distributors provide component or system options based upon data or specifications provided by the user, the user is responsible for determining that such data and specifications are suitable and sufficient for all applications and reasonably foreseeable uses of the components or systems.

Offer of Sale

The items described in this document are hereby offered for sale by Parker Hannifin Corporation, its subsidiaries or its authorized distributors. This offer and its acceptance are governed by the provisions stated in the "Offer of Sale".



WARNING: This product can expose you to chemicals including Lead and Lead Compounds, and Di(2-ethylhexyl)phthalate (DEHP) which are known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to www.P65Warnings.ca.gov

© Copyright 2024, Parker Hannifin Corporation, All Rights Reserved

General Information

Foreword	1
Safety Information	1-3
PTO Safety Label Instructions	3
Pump Bracketing Best Practices	4-5
Function of Auxiliary Power Shafts	6
Spicer® Universal Joint Engineering Data	7
PTO Shifting Procedure & Precautions	8
PTO Maintenance	9
Recommended Tools	10

Allison Installation Instructions

Direct Mount Pump Support Requirements for Allison SG102 Bracket	12-13
Pre-Installation of PTO	14
PTO Installation	14-17
Pressure Port and Aperture Opening Identification	18
Standard Hose Specifications by Transmission	18

Allison Installation Sketches

Allison Transmission Shift Option B & D	
Elec/Hyd w/o EOC – 281/871 Series (SK-347 Rev M)	19
Allison Transmission Shift Option K & L	
Elec/Hyd w/ EOC – 281/871 Series (SK-472 Rev D)	20
Allison Transmission Shift Option G & H	
Elec/Hyd w/ Remote Mount Solenoid – 281/871 Series (SK-432 Rev H)	21
Allison Transmission Shift Option S & T	
Elec/Hyd w/ PTO/Combo Valve – 281 Series (SK-427 Rev E)	22

Caterpillar Installation Instructions

PTO Installation	24-26
Pressure Port Locations and Hose Chart	27

Caterpillar Installation Sketches

Caterpillar Transmission Shift Option B & D	
Elec/Hyd w/o EOC – 281 Series (SK-411 Rev D)	28
Caterpillar Transmission Shift Option K & L	
Elec/Hyd w/ EOC – 281 Series (SK-473 Rev B)	29
Caterpillar Transmission Shift Option G & H	
Elec/Hyd w/ Remote Mount Solenoid – 281 Series (SK-413 Rev E)	30

Wet Spline Installation Sketches

Wet Spline Installation – RY Output Option 267 Series (SK-351 Rev C)	31
Wet Spline Installation – AF Output Option 267 Series (SK-350 Rev D)	31
Wet Spline Installation – RJ Output Option 267 Series (SK-465 Rev B)	32
Wet Spline Installation – AK Output Option 267 Series (SK-378 Rev A)	33
Wet Spline Installation – RB, RF, RK, RS, RY & RZ Output Options	
281/288/871/878 Series (SK-508 Rev C)	34
Installation Mounting Kit Instructions – 267/281/871/878 Series (SK-355 Rev E)	35
Installing Rotatable Flanges	36
Offer of Sale	37-39

Foreword

This booklet will provide you with information on correct installation of Chelsea® Power Take-Offs (PTOs). Proper installation and setup procedures can help you get additional and more profitable hours from your truck equipment and components.

It is important that you be sure that you are getting the right transmission and PTO combination when you order a new truck. A mismatched transmission and PTO combination can result in unsatisfactory performance of your auxiliary power system from the start.

If you have questions regarding correct PTO and transmission combination, please contact your local Chelsea® representative. They can help you select the properly matched components to ensure correct and efficient applications.

Safety Information

These instructions are intended for the safety of the system designer, installer, operator, and supporting personnel. If you have any additional questions after reading the instructions below, please reach out to your local Chelsea representative.

General Safety Information

To prevent injury to yourself and/or damage to the equipment:

- Carefully read all owner's manuals, service manuals, and/or other instructions.
- Always follow procedures using proper tools and safety equipment.
- Ensure proper training is received prior to attempting to install equipment.
- Always block any raised or moving device that may injure a person working on or under a vehicle.
- Never work alone while under a vehicle, repairing equipment, or maintaining equipment.
- Always use proper components in applications for which they are approved.
- Never use worn-out or damaged components.
- Never operate the controls of the PTO or other driven equipment from any position that could result in getting caught in the moving machinery.

Proper Matching of PTO



WARNING: A Power Take-Off must be properly matched to the vehicle transmission and to the auxiliary equipment being powered. An improperly matched Power Take-Off could cause severe damage to the vehicle transmission, the auxiliary driveshaft, and/or to the auxiliary equipment being powered. **Damaged components or equipment could malfunction causing serious personal injury to the vehicle operator or to others nearby.**

To avoid personal injury and/or equipment damage:


- Always refer to Chelsea's catalogs, literature, and owner's manuals.
- Follow Chelsea's recommendations when selecting, installing, repairing, or operating a PTO.
- Never attempt to use a PTO that is not specifically recommended by Chelsea for the vehicle, transmission, and application.
- Always match the PTO's specified output capabilities with the requirements of the equipment to be powered.
- Never exceed the maximum speed listed in Chelsea's Applications Catalog.



This symbol warns of possible personal injury.

Safety Information (Continued)

Cold Weather Operation of PowerShift PTO

 **WARNING:** During extreme cold weather operation [32°F (0°C) and lower], a disengaged PowerShift Power Take-Off can momentarily transmit high torque that will cause unexpected output shaft rotation. This is caused by the high viscosity of the transmission oil when it is extremely cold. As slippage occurs between the Power Take-Off clutch plates, the oil will rapidly heat up, and the viscous drag will quickly decrease.

The rotation of the PTO's output shaft could cause unexpected movement of the driven equipment resulting in serious personal injury, death, or equipment damage.

To avoid personal injury or equipment damage:


- Driven equipment must have separate controls.
- The driven equipment must be left in the disengaged position when not in operation.
- Do not operate the driven equipment until the vehicle is allowed to warm up.

Rotating Auxiliary Driveshafts




- Rotating auxiliary driveshafts can cause serious injury or death by snagging clothes, skin, hair, hands etc.
- Do not go under the vehicle when the engine is running.
- Do not work on or near an exposed shaft when the engine is running.
- Shut off the engine before working on the PTO or driven equipment.
- Exposed rotating driveshafts must be guarded.


Guarding Auxiliary Driveshafts


 **WARNING:** We strongly recommend that a Power Take-Off and a directly mounted pump be used to eliminate the auxiliary driveshaft whenever possible. If an auxiliary driveshaft is used and remains exposed after installation, it is the responsibility of the vehicle designer to specify guard(s) and PTO installer to install guard(s).

Using Set Screws

 **WARNING:** Auxiliary driveshafts may be installed with either recessed or protruding set screws. If you choose a square head set screw, you should be aware that it will protrude above the hub of the yoke and may be a point where clothes, skin, hair, hands etc., could be snagged. A socket head set screw, which may not protrude above the hub of the yoke, does not permit the same amount of torquing as does a square head set screw. Also, a square head set screw, if used with a lock wire, will prevent loosening of the screw caused by vibration. Regardless of the choice made with respect to a set screw, an exposed rotating auxiliary driveshaft must be guarded.

Important: Safety Information and Owner's Manual

 **WARNING:** Chelsea Power Take-Offs are packaged with warning labels, safety information decals, instructions, and an owner's manual. These items are located in the envelope with the PTO mounting gaskets. Also, safety information and installation instructions are packaged with some individual parts and kits. Be sure to read the owner's manual and safety information before installing or operating the PTO. Always install the safety information decals according to the instructions provided. Place the owner's manual in the vehicle glove compartment.

 This symbol warns of possible personal injury.

Safety Information (Continued)

WARNING: Operating the PTO with the Vehicle in Motion

Some Power Take-Offs may be operated when the vehicle is in motion. PTOs must be properly selected to operate at highway speeds, correctly matched to the vehicle's transmission, as well as the requirements of the driven equipment.

If in doubt about the PTO specifications and capabilities, avoid operating the PTO when the vehicle is in motion. Improper application and/or operation can cause serious personal injury as well as premature failure of the vehicle, driven equipment, and PTO.

Always remember to disengage the PTO when the driven equipment is not in operation.

PTO Safety Label Instructions

1. The two black and orange on white 5" x 7" pressure sensitive vinyl labels (PN 379274) must be placed one on each side of the vehicle in a position that would be **HIGHLY** visible to anyone that would go under the truck near the PTO rotating shaft. If the vehicle is to be painted after these labels are installed, cover them with two blank masking covers. Remove the masking covers after painting.
2. Place the one black and orange on white 3.5" x 5" pressure sensitive vinyl label (PN 379275) on the sun visor nearest the operator of the vehicle.
3. Place the one red and white with black lettering 3.5" x 7" pressure sensitive vinyl label (PN 379915) on the sun visor next to the above label (PN 379275).
4. Place the one white and black heavy-duty card (PN 379276) in the vehicle glove box in a position highly visible to the operator. For example, try to place this card on top of whatever may be in the glove box.

If you require labels, please order part number 328946X at no charge from your local Chelsea representative or send request direct to:

Parker-Hannifin Corporation

Chelsea Products Division
8225 Hacks Cross Road
Olive Branch, MS 38654

Phone: +1 (662) 895-1011

Email: chd_support@support.parker.com



Part #379276



Part #379275



Part #379915

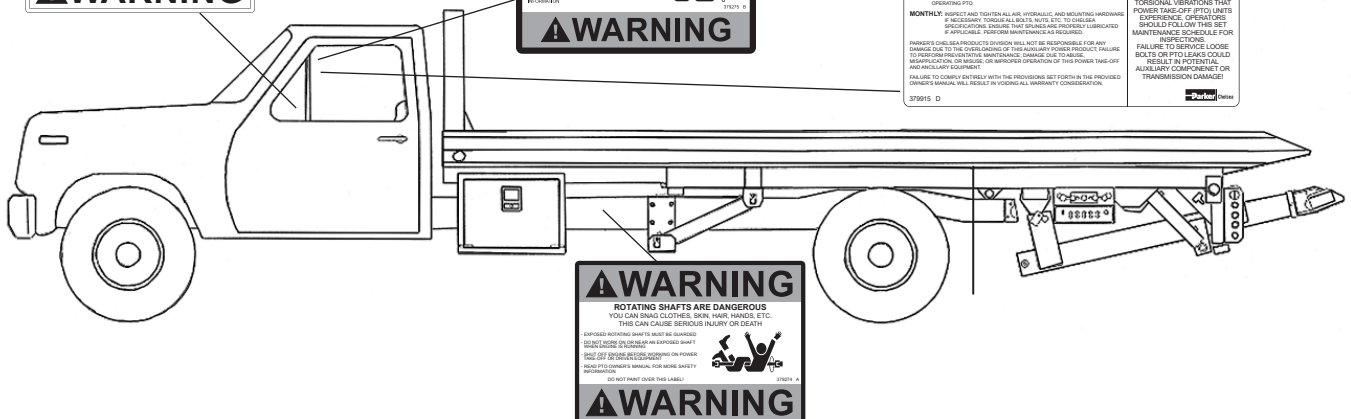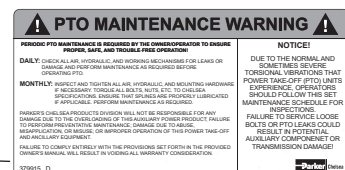

 This symbol warns of possible personal injury.

Part #379274



Pump Bracketing Best Practices

With changes in emissions standards, truck systems are experiencing more vibration and vibration related issues. Due to the changes, Parker Chelsea finds it necessary to discuss the importance of pump bracketing and the effects it can have on the mounted PTO. Parker Chelsea has made updates to the pump bracketing support guidelines listed in all PTO Owner's Manuals. This bulletin will discuss the importance of bracketing and the best practices to keep in mind when mounting a pump.

Please note, due to the high variance of applications and the increasing severity of vibration found in modern diesel engines Parker Chelsea's pump bracketing best practices cannot consider all factors affecting the PTO and Pump bracketing. Please use the following information as a GUIDELINE ONLY when installing pump bracketing.

Potential causes of bracket failures that can damage a PTO and/or Pump:

- Excessive preload from poor bracket design, fabrication, and installation.
- Excessive vibration from the vehicle's normal driving operation leading to high loads on the PTO bolts.
- Torque spikes from extreme vibration could be intense enough to break bolts in the bracketing. The worst cases occur while the truck is operating at highway speeds.




In addition to the conditions listed above, Chelsea requires the use of support brackets in all applications to ensure the Maximum Bending Moment (MBM) of the PTO and pump assembly is not exceeded. Exceeding the MBM can result in damage to PTO, transmission, driven equipment, and/or personnel. It is the responsibility of the installer to ensure that adequate support is implemented. All applications are unique and it is important to consider all parameters in designing a proper support bracket.


Use **CAUTION** to ensure the support bracket does not pre-load PTO and pump mounting. Prior to mounting, pumps must be fully supported by a jack until it is properly secured with support bracket(s). This will ensure the PTO is not being stressed by the bracket. Brackets must be designed to adequately eliminate deflections from weight, vibration, and truck movements.

PTO warranty will be voided if support brackets are not used when one of the following conditions apply:

- Combined weight of the pump, fittings, hoses, and oil exceeds 40 lbs [18.14 kg]
- Combined length of the PTO and pump is greater than 18 inches [45.72 cm]
- Pumps should have a support bracket when mounted onto a on a non-extended shaft PTO
- Extended Shaft PTOs: Please see applicable owner's manual for additional guidance

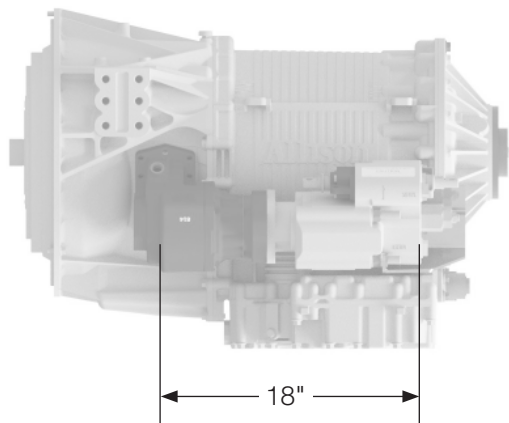

To ensure proper bracketing, brackets must attach at two or more transmission bolt locations as well as two or more pump (bolt) locations. Please reach out to your transmission manufacturer for proper bracket mounting locations.

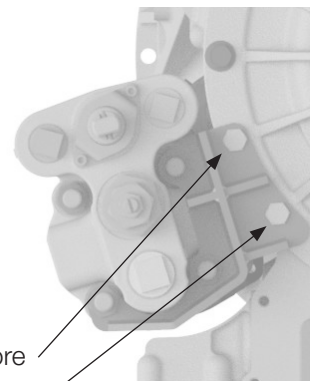

 This symbol warns of possible personal injury.

Pump Bracketing Best Practices (Continued)

An installed PTO/Pump bracket needs to be properly aligned. Misalignment in the X direction (**Fig. 1**) is substantially more impactful than misalignment in the Y or Z direction (**Fig. 2**). To prevent this, installing a fixture-built bracket is preferred. This allows the PTO/Pump to be installed prior to making the final welds on the bracket.

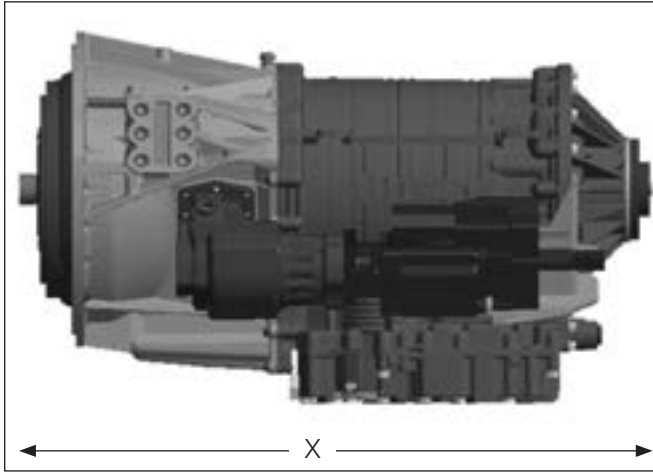


Figure 1


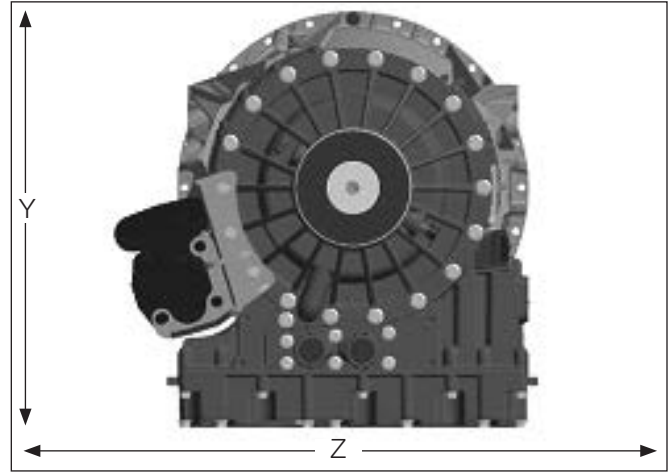


Figure 2

- The PTO/Pump should be treated as engine mounted components and installed per the engine manufacturer's published guidelines for engine mounted components when applicable.
- For proper bracketing, attach the bracket at two or more transmission bolt locations and two or more pump locations. Whenever possible, three attachment points in either (or both) locations is suggested. Please contact the transmission manufacturer for proper bracket mounting locations.
- Brackets should contain at least one gusset, preferably two. The gussets should be 3/8" thick and at least 1" deep. 3/8" steel is suggested particularly with gussets and in areas with reduced cross section.
- Please refer to the transmission and pump manufacturer's approved pump bracket support locations.

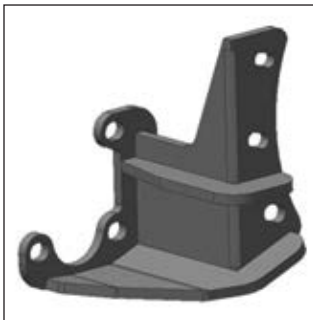

These best practices should be followed for optimal results. Please note, each bracketing situation is different so this bulletin must only be used as a guideline. For further bracketing assistance please refer to your PTO Owner's Manual or contact your Chelsea PTO representative for questions.

If you have any technical questions, contact us at:

Phone: +1 (662) 895-1011

Email: chd_support@support.parker.com

Function of Auxiliary Power Shafts

An auxiliary power shaft transmits torque from the power source to the driven accessory. The shaft must be capable of transmitting the maximum torque and RPM required of the accessory, plus any shock loads that develop.

An auxiliary power shaft operates through constantly relative angles between the power source and the driven accessory. Therefore, the length of the auxiliary power shaft must be capable of changing while transmitting torque. This length change, commonly called slip movement, is caused by movement of the power train due to torque reactions and chassis deflections.

Joint operating angles are very important in an auxiliary power joint application. In many cases, the longevity of a joint is dependent on the operating angles in the chart below.

SPICER® UNIVERSAL JOINT OPERATING ANGLES			
Prop. Shaft RPM	Max. Normal Operating Angle	Prop. Shaft RPM	Max. Normal Operating Angle
3000	5° 50'	1500	11° 30'
2500	7° 00'	1000	11° 30'
2000	8° 40'	500	11° 30'
Above based on angular acceleration of 100 RAD/SEC ²			

This information is limited to 1000 through 1310 series applications. For applications requiring a series larger than 1310, please contact your driveline specialist.

Determining Shaft Type

- 1) Solid or tubular?
 - a) In applications requiring more than 1000 RPM or where the application necessitates a highly balanced auxiliary power shaft, a tubular shaft should be used.
 - b) Spicer's solid shaft auxiliary power joints are designed for intermittent service at 1000 or less RPM. Examples include driving of small hydraulic pumps, low speed product pumps, and winches.
- 2) Joint Series should be determined using the chart on the following page.



WARNING: direct customer to driveline manuf/spec.

Spicer® Universal Joint Engineering Data

Joint Series	1000	1100	1280	1310
Torque Rating				
Automotive (Gas or Diesel Engine) lb-ft Continuous	50	54	95	130
Tubing				
Diameter	1.750"	1.250"	2.500"	3.000"
Wall Thickness	.065"	.095"	.083"	.083"
W = Welded S = Seamless	W	S	W	W
Flange Diameter (Swing Diameter)				
Rectangular Type	3.500"	3.500"	3.875"	3.875"
Bolt Holes - Flange Yoke				
Circle	2.750"	2.750"	3.125"	3.125"
Diameter	.312"	.312"	.375"	.375"
Number	4	4	4	4
Male Pilot Dia.	2.250"	2.250"	2.375"	2.375"
Distance Across Lugs				
Snap Ring	2.188"	2.656"	3.469"	3.469"
Construction	2.188"	2.656"	3.469"	3.469"
Bearing Diameter	.938"	.938"	1.062"	1.062"

^{1,2} Maximum Operating Speed for Tube or Solid Shaft Diameter and Length

Tube	RPM - Revolutions per Minute				
OD x Wall Thickness (Joint Type)	500	1000	1500	2000	2500
1.750" x .065" (Welded)	117"	82"	67"	58"	52"
1.250" x .095" (Seamless)	91"	64"	52"	45"	40"
2.500" x .083" (Welded)	122"	87"	70"	62"	55"
3.000" x .083" (Seamless)	-	-	-	85"	76"
Solid Shaft	RPM - Revolutions per Minute				
Diameter	500	1000	1500	2000	2500
.750"	60"	42"	35"	30"	27"
.812"	62"	44"	36"	31"	28"
.875"	65"	46"	37"	32"	29"
1.000"	69"	49"	40"	35"	31"
1.250"	77"	55"	45"	39"	35"

¹ The numbers expressed above represent the maximum installed length for tubing or solid shaft in both two joint assemblies and joint shaft applications.

² Please contact your Chelsea representative for applications with speeds below 500 RPM and over 2500 RPM.



WARNING: direct customer to driveline manuf/spec.

PTO Shifting Procedure & Precautions

CAUTION: This vehicle is equipped with a Power Take-Off. Shut engine off before working on the Power Take-Off or getting below the vehicle. Consult the operating instructions before using the PTO (See sun visor).

POWER TAKE-OFF OPERATION — VEHICLE STATIONARY

Automatic Transmission with PowerShift PTO

Engage the PTO with the engine at idle speed.

NOTE: PowerShift PTO: The engine must be at idle or below 1000 RPM when the PTO is engaged. See the transmission manufacturer's instructions for special procedures.

IMPORTANT:

Failure to follow the proper shifting or operating sequences will result in premature PTO failure with possible damage to other equipment.



WARNING: Cold Weather Operation of PowerShift PTO

During extreme cold weather operation [32°F (0°C) and lower], a disengaged PowerShift Power Take-Off can momentarily transmit high torque that will cause unexpected output shaft rotation. This is caused by the high viscosity of the transmission oil when it is extremely cold. As slippage occurs between the Power Take-Off clutch plates, the oil will rapidly heat up and the viscous drag quickly decreases.

The rotation of the PTO's output shaft could cause unexpected movement of the driven equipment, resulting in serious personal injury, death, or equipment damage.

To avoid personal injury or equipment damage:

- Driven equipment must have separate controls.
- Driven equipment must be left in the disengaged position when not in operation.
- Driven equipment must not be operated until the vehicle is allowed to warm up.



This symbol warns of possible personal injury.

Power Take-Off Maintenance

Due to the normal and sometime severe torsional vibrations that PTOs experience, operators should follow a set maintenance schedule for inspections. Failure to service loose bolts or PTO leaks could result in potential auxiliary Power Take-Off or transmission damage.

Periodic PTO maintenance is required by the owner/operator to ensure proper, safe, and trouble-free operation.

Daily: Check all air, hydraulic, and working mechanisms before operating PTO and perform maintenance as required.

Monthly: Inspect for possible leaks and tighten all air, hydraulic, and mounting hardware if necessary. Torque all bolts, nuts, etc., to Chelsea's specifications. If applicable, ensure that splines are properly lubricated. Perform maintenance as required.

With regards to the direct mounted pump splines, the PTO requires the application of a specially formulated anti-fretting grease. This grease must be specified for both high pressure and high temperature applications. The addition of the grease has been proven to reduce the effects of torsional vibrations, which result in fretting corrosion on the PTO's internal splines as well as the pump's external splines. Fretting corrosion appears as a rusting and wearing of the pump shaft splines. Severe duty applications, which require long PTO running times and high torque, may require more frequent regreasing. Continuous duty applications with light loads require frequent regreasing due to the higher number of running hours, an example of this is utility trucks. It is important to note that service intervals will vary for every application and they are the responsibility of the end user of the product. Chelsea also recommends that you consult your pump's owner's manual and technical services for their maintenance guidelines. Fretting corrosion is caused by many factors and without proper maintenance; the anti-fretting grease can only reduce its effects on components.

Chelsea offers anti-fretting grease to our customers in two package sizes:

- 5/8 fluid ounce tube (PN 379688) - Provided with PTO where applicable
- 14-ounce grease cartridge (PN 379831)

Warranty: Failure to comply entirely with the provisions set forth in the appropriate owner's manual will result in voiding of warranty consideration.

Recommended Tools

Drivers

Although not necessary, a compact drill/impact driver can help run in bolts to reduce muscle fatigue (**Fig. 3**).



Figure 3

Caution: Be careful not to cross-thread or damage threads with this tool. It is recommended to start bolts by hand for a few threads before using cordless driver.

Wrenches

Standard 3/8" Torque Wrench – 35-50 lb-ft (**Fig. 4**).



Figure 4

Ratcheting Flex-Head – 10 mm, 12 PT (**Fig. 5**).



Figure 5

Extension

3/8" Extension 6" Long (**Fig. 6**).



Figure 6

Sockets

Flank Drive Swivel 3/8" Socket – 12 PT (**Fig. 7**).



Figure 7

Adapter

Torque Adapter – 10 mm, 12 PT (**Fig. 8**). Extremely necessary for difficult to reach bolts.

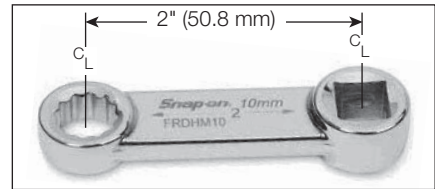


Figure 8

Corrected Torque

When using a torque wrench adapter, which changes the distance from the torque drive to the adapter drive, apply the following formula to obtain torque rating.

T = Actual (desired) torque • **Y** = Applied (indicated) torque • **L** = Effective length lever • **E** = Effective length of extension

FORMULA: $\frac{T \times L}{L + E} = Y$

Adapter Drive Centerline
 Torque Wrench
 Wrench Drive Centerline
 Handgrip Centerline (Predetermined)

Short Open End Adapters
 Set Screw Adapter
 Hose Clamp Adapter

Example with a Plus Dimension

$$\frac{50 \text{ lb-ft} \times 1 \text{ ft}}{1 + .167 \text{ ft}} = 42.84 \text{ lb-ft}$$

FORMULA: $\frac{T \times L}{L - E} = Y$


Adapter Drive Centerline
 Torque Wrench
 Wrench Drive Centerline
 Handgrip Centerline (Predetermined)

Open End Wrench Adapter
 Flare Nut Wrench Adapter
 Spanner Wrench Adapter

Example with a Minus Dimension

$$\frac{50 \text{ lb-ft} \times 1 \text{ ft}}{1 - .167 \text{ ft}} = 60.02 \text{ lb-ft}$$

ALLISON

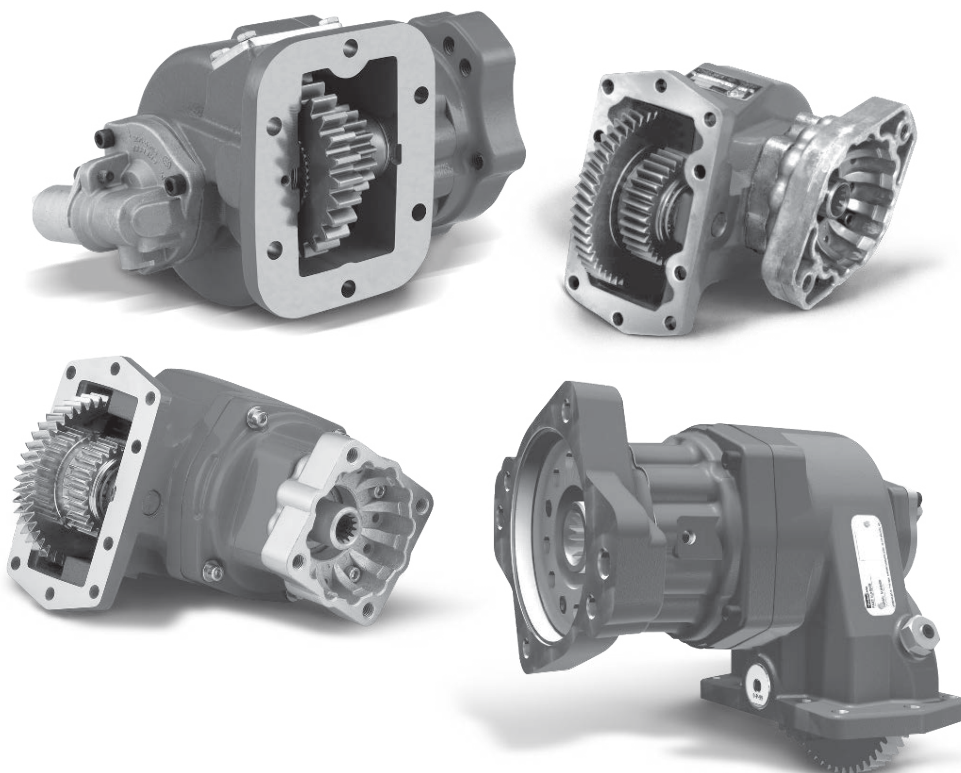

Allison Installation Instructions**Direct Mount Pump Support Requirements for Allison SG102 Bracket**

With the release of Parker Hannifin's new SG102 Dump Pump, Parker Chelsea is pleased to release direct mount support brackets for use with Allison's 3000 and 4000 families of transmissions utilizing 281 Series Power Take-Offs (PTOs).

As noted in the safety section of Chelsea's Applications Catalog, Chelsea requires the use of pump support brackets in all applications in which a) the combined weight of the pump fittings and hose exceeds 40 pounds (18.14 kg) or b) the combined length of the PTO and pump is 18" (45.72 cm) or more from the PTO centerline to the end of the pump. These requirements are to ensure the Maximum Bending Moment (MBM) of the PTO+pump is not exceeded, potentially causing damage to the PTO, transmission, driven equipment and/or personnel.

Transmission Family	Transmission Mounting Location	Bracket Kit Part Number	Component	Description	QTY
3000	Left Side	329972-1X	50-P-171	Bracket	1
			379433-5	Cap Screws	2
4000	Left Side and Right-Top	329972-2X	50-P-175	Bracket	1
			379433-5	Cap Screws	2

Mounting Rotatable (RK) Flange to 281 Series PTO

1. For proper pump orientation with pump support brackets, use holes on the output of the PTO (**Fig. 9**).
2. For proper pump orientation with pump support brackets, please note the angle of RK output pump flange (**Fig. 10**).
3. Torque cap screws for mounting flange to PTO to 24-28 lb-ft [32-38 N-m].


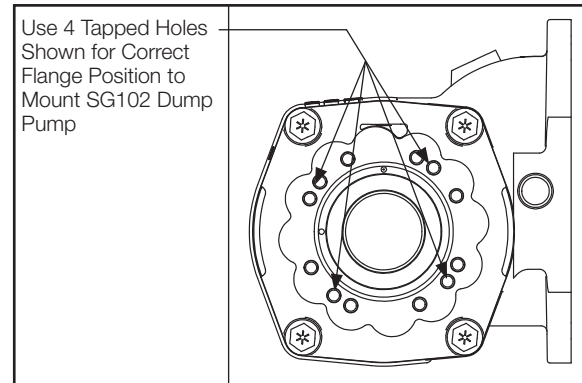


Figure 9

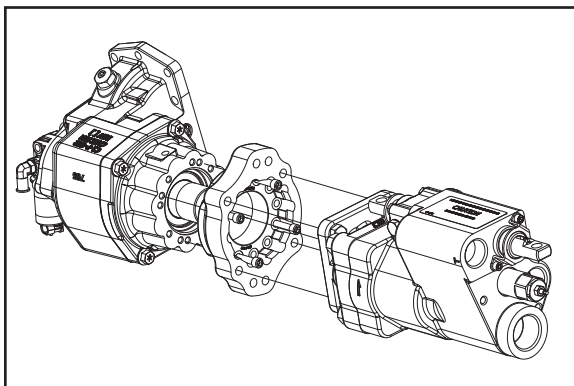

281 Series PTO RK Flange Installed

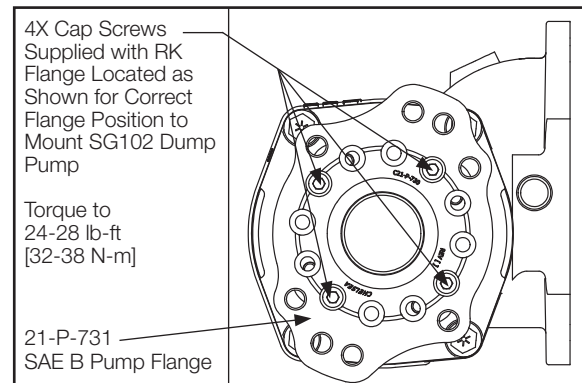


Figure 10



WARNING: Ensure all fasteners and fittings are torqued according to their manufacturer's specification.

Direct Mount Pump Support Requirements for Allison SG102 Bracket (Continued)**Allison 3000 Family Series Installation**

1. Install 281 Series PTO and SG102 pump to the transmission in the PTO aperture. Support pump when brackets are not installed.
2. Install bracket to transmission using the existing transmission bolts in approved locations (**Fig. 11**). Slightly tighten, but do not fully torque to allow alignment of all mounting holes.
3. Install bracket cap screws into back of SG102 and torque to spec of 30-35 lb-ft [47-54 N-m].
4. Torque existing transmission bolts to spec 66-81 lb-ft [90-110 N-m].

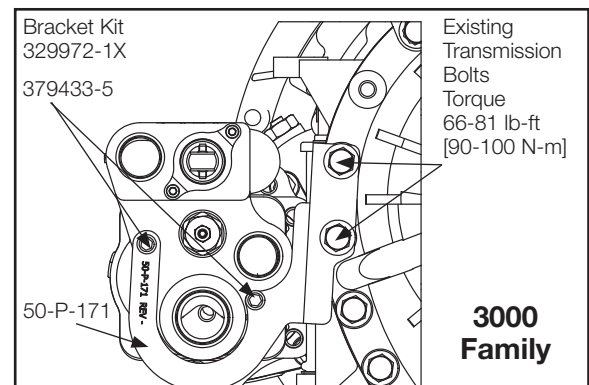


Figure 11

Allison 4000 Family Series Installation

1. Install 281 Series PTO and SG102 pump to the transmission in the PTO aperture. Support pump when brackets are not installed.
2. Install bracket to transmission using the existing transmission bolts in approved locations (**Fig. 12**) and (**Fig. 13**). Slightly tighten, but do not fully torque to allow alignment of all mounting holes.
3. Install bracket cap screws into back of SG102 and torque to spec of 30-35 lb-ft [47-54 N-m].
4. Torque existing transmission bolts to spec 74-89 lb-ft [100-120 N-m].

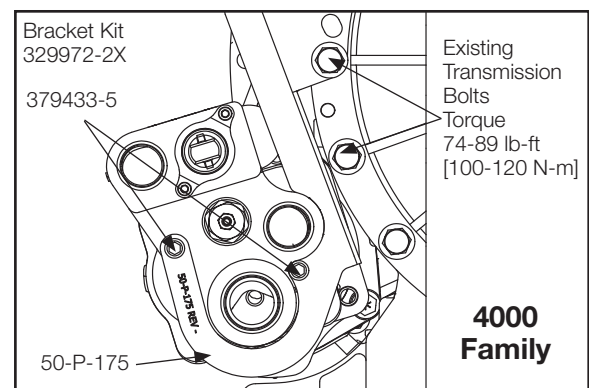


Figure 12

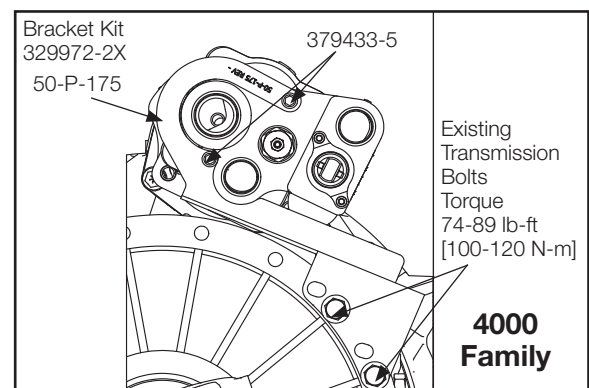


Figure 13

Pre-Installation of PTO

1. Install PTO pressure switch, part #379502, into port on Hydraulic Valve Cap. Torque between 120-140 lb-in [14-16 N-m] (**Fig. 14**).
2. If unit has a Wet Spline output option, install tee fitting (379627) into output bearing cap (**Fig. 15**).



Figure 14

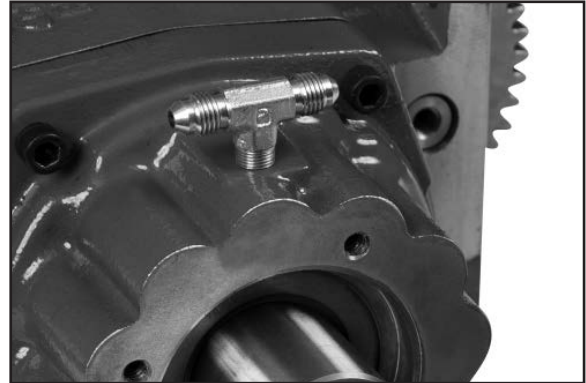


Figure 15

PTO Installation

When installing a PTO, always wear protective clothing and safety glasses.

1. Begin by draining the oil from the transmission. Use caution, since the oil may be hot (**Fig. 16**).

NOTE: Installation shown is for Left Side (Street Side) of transmission.

2. Remove the PTO aperture plate with a 15 mm socket (**Fig. 17**).

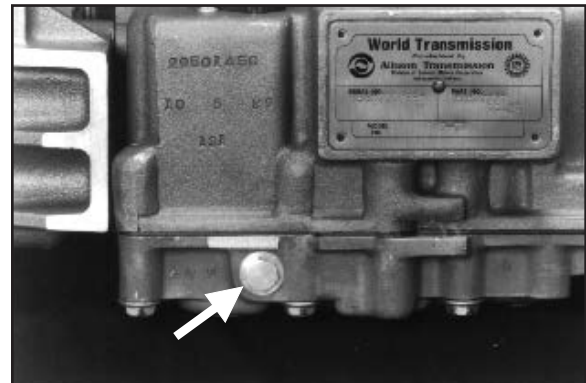


Figure 16



Figure 17

PTO Installation (Continued)

3. Remove the gasket and clean the aperture surface (**Fig. 18**).

NOTE: Do not reuse the gasket that comes with the transmission.

4. Using a screwdriver, install the guide pins until they bottom out (**Fig. 19**).

NOTE: See [page 35](#) for dowel pin locations.

NOTE: Do not use sealing compounds because they are generally incompatible with automatic transmission fluid.

5. Install the special gasket over the guide pins. The ribbed surface should face outward, toward the installer (**Fig. 20**).

NOTE: To ensure proper backlash and sealing of PTO to transmission, only use gasket furnished with the PTO.

6. Position the PTO and secure it with the top cap screw (**Fig. 21**).

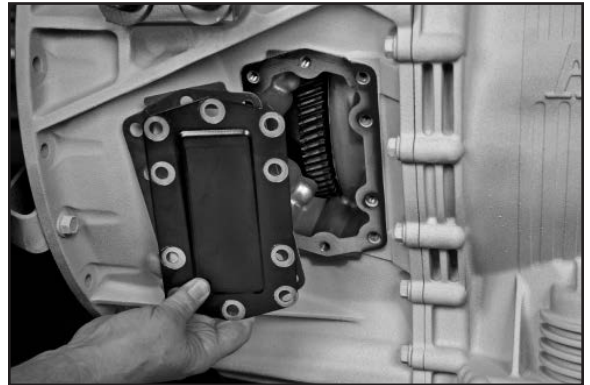


Figure 18

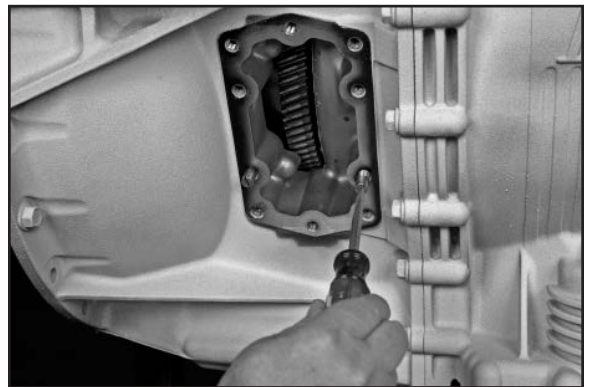


Figure 19



Figure 20

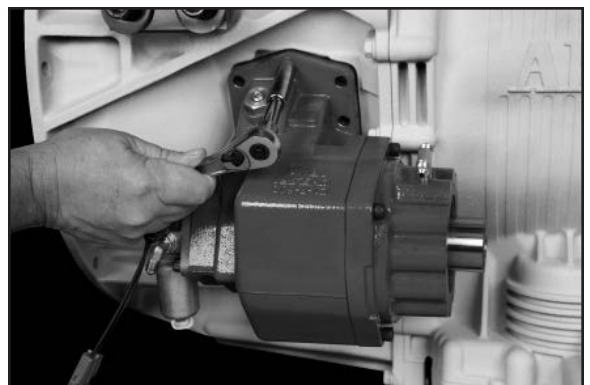


Figure 21

PTO Installation (Continued)

7. Install the remaining cap screws. Torque all to 40-50 lb-ft [54-68 N-m] (**Fig. 22**).

NOTE: Always use a crossing pattern with tightening cap screws.

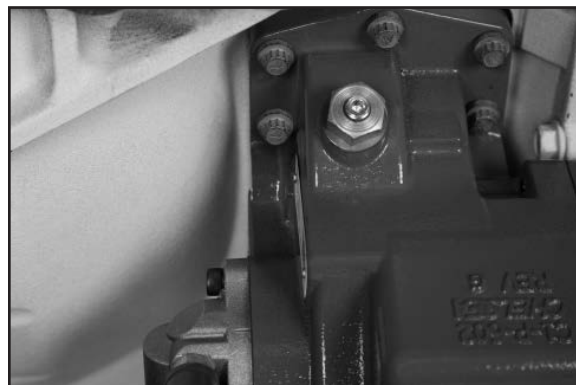


Figure 22

8. If installing a wet spline output, attach hose to tee fitting on output flange. If Non-Wet Spline Option, attach hose to fitting at PTO valve (**Fig. 23**).



Figure 23

9. Remove the transmission high pressure port plug and securely install the 90-degree elbow fitting (379486) supplied with the PTO (**Fig. 24**). [See page 18](#) for pressure port locations on Allison transmissions. Torque fitting to 10-12 lb-ft.

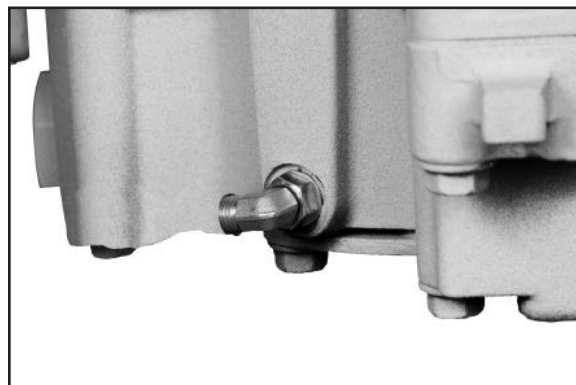


Figure 24 (Left side shown)

10. Wet Spline Option - Connect the pressure hose between the tee fitting on the output bearing cap and high pressure port on the transmission. Non-Wet Spline Option - Attach hose between PTO valve fitting and high pressure port on the transmission (**Fig. 25**). Torque fitting to 10-12 lb-ft.



Figure 25

PTO Installation (Continued)

11. After determining the position of the rotatable flange/pump, install the flange with the gasket and cap screws supplied with the PTO (**Fig. 26**).

Installing Rotatable Flanges

The rotatable flange is shipped loose with the PTO units for ease of installation. After determining the flange position, attach the flange to the PTO bearing cap using the cap screws provided in the bag kit. After installing the cap screws make sure to torque the screws to 24-28 lb-ft [33-39 N-m]. Consideration should be taken on the size and weight of the pump being installed ([See pages 4-5](#)).

CAUTION: If not installing direct mount pump at this time, install gasket, cover plate, and bolts to Wet Spline Output Option to prevent transmission fluid from leaking out of PTO flange if truck engine is turned "ON" (**Fig. 27**).

NOTE: Also [see pages 31-34](#) for Wet Spline information.

12. Complete the assembly by installing the electrical connection to the valve assembly (**Fig. 28**) and the pressure switch (379502) (**Fig. 29**). Not available for the 288 Series Installations.

13. Reference SK-Drawings in this book for complete installation information.

NOTE: After installation is complete, refill transmission with oil as per manufacturer recommendation. Run PTO for approximately 5-10 minutes. Check for any unusual noise or vibration. Also check for leaks and/or loose fittings or fasteners. Disengage PTO and shut vehicle engine off. Repair any discrepancies found.

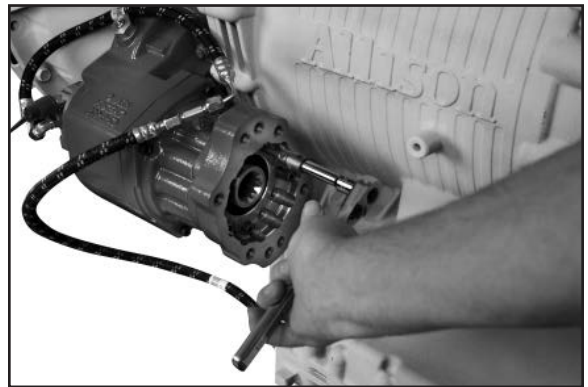


Figure 26



Figure 27



Figure 28

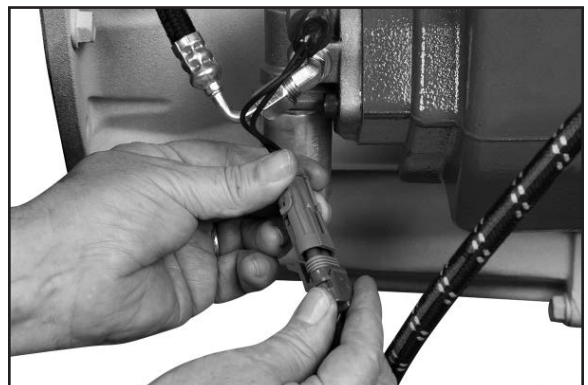
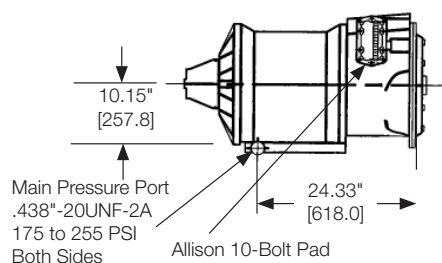



Figure 29

Pressure Port and Aperture Opening Identification




These drawings below represent pressure port locations on Allison's 3000 and 4000 Family transmissions.

3000 Family


Top/Left

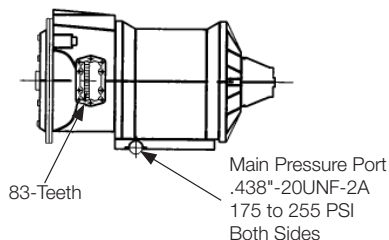

Right/Left

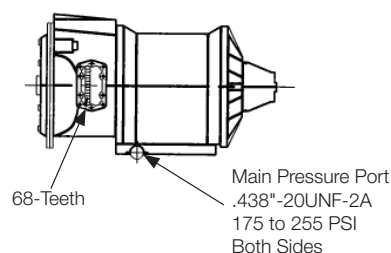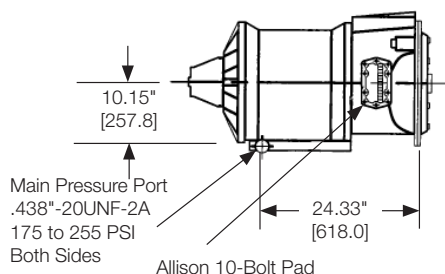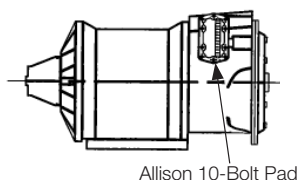**4000 Family**


Top/Left

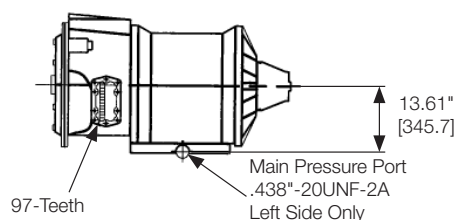
**Standard Hose Specifications by Transmission**

TRANS.	LUBE OPTION	LOCATION	267 Series	281/288/871/878 Series
3000 Family	P	Top Right (Right Pressure Port)	329130-6X	329141-1X
3000 Family	P	LH Side (Left Pressure Port)	329130-1X	329141-1X
3000 Family	P	RH Side (Right Pressure Port)	329130-4X	329141-1X
4000 Family	P	Top Right (Left Pressure Port)	329130-6X	329141-1X
4000 Family	P	LH Side (Left Pressure Port)	329130-1X	329141-1X
4000 Family ¹	R, S	LH Side (Left Pressure Port)	-	329141-1X
4000 Family ¹	R, S	Top Right (Left Pressure Port)	-	329141-1X
3000 Family ¹	R, S	LH Side (Left Pressure Port)	-	329141-1X
3000 Family ¹	R, S	RH Side (Right Pressure Port)	-	329141-1X

A 4000 with 2 PTOs requires a 379556 T-fitting and a 379703 swivel nut 90-degree elbow to attach 2 hoses to the single port on the left side.


¹ Lubrication Option R, S Shifter Options G and H for 871 Series.

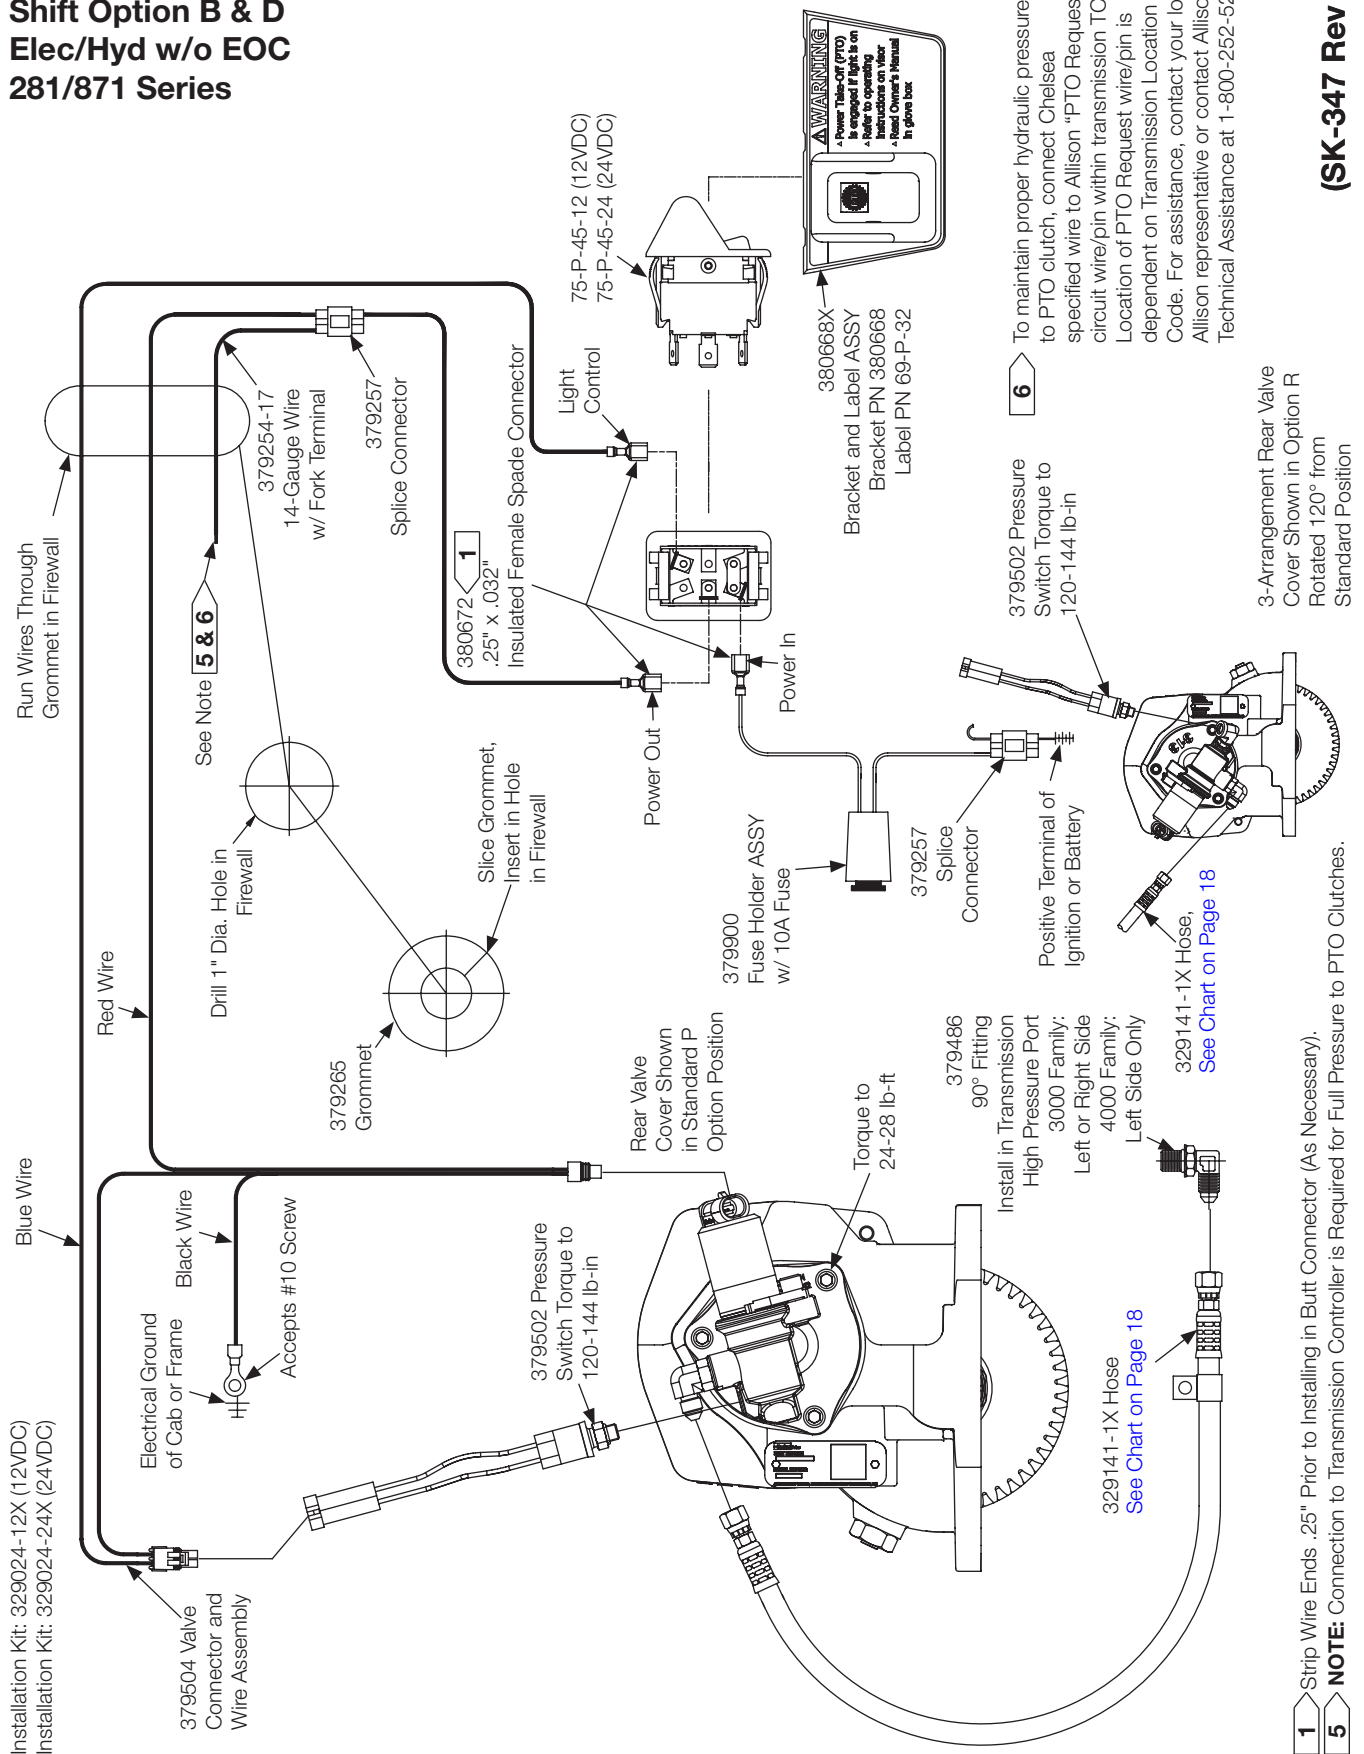

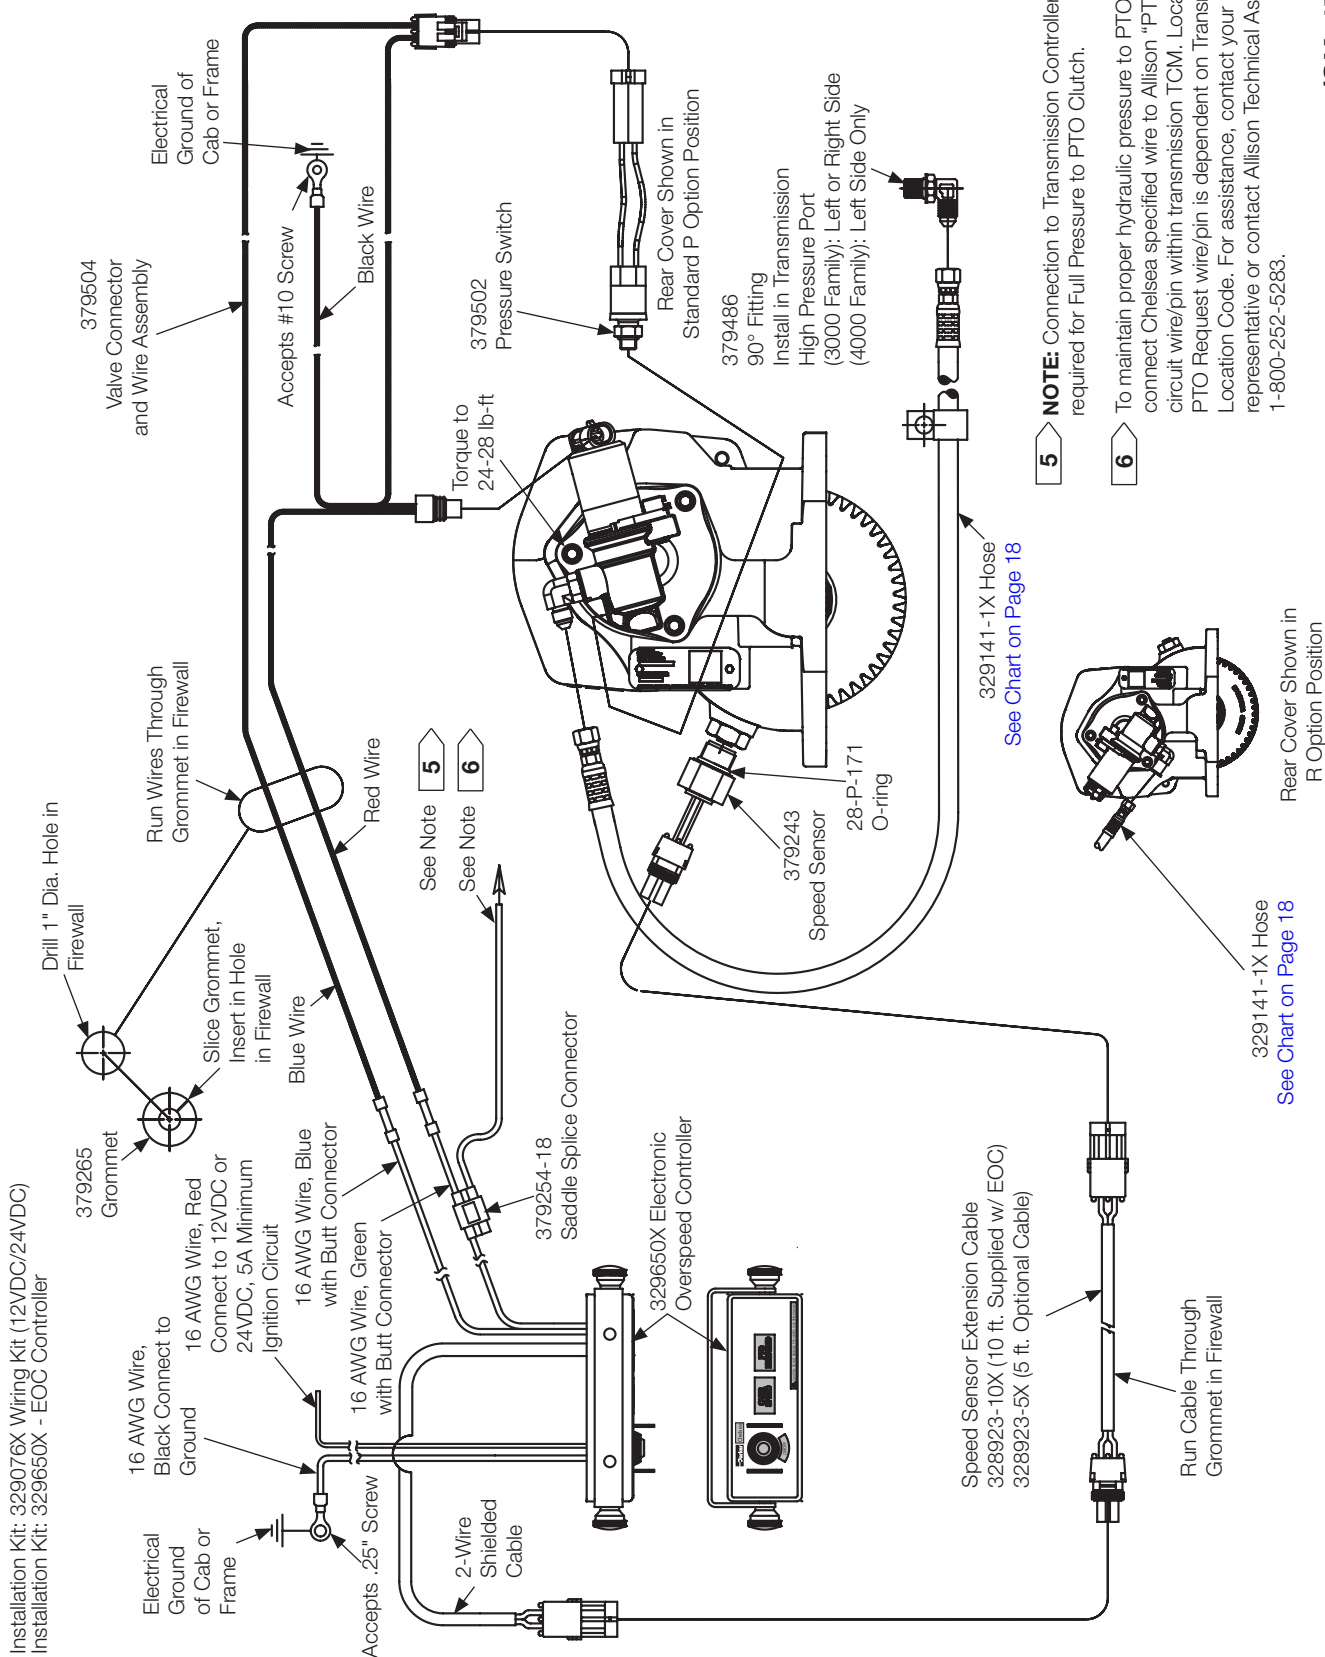

(SK-472 Rev D)


**Allison Transmission
Shift Option G & H
Elec/Hyd w/ Remote Mount Solenoid
281/871 Series**

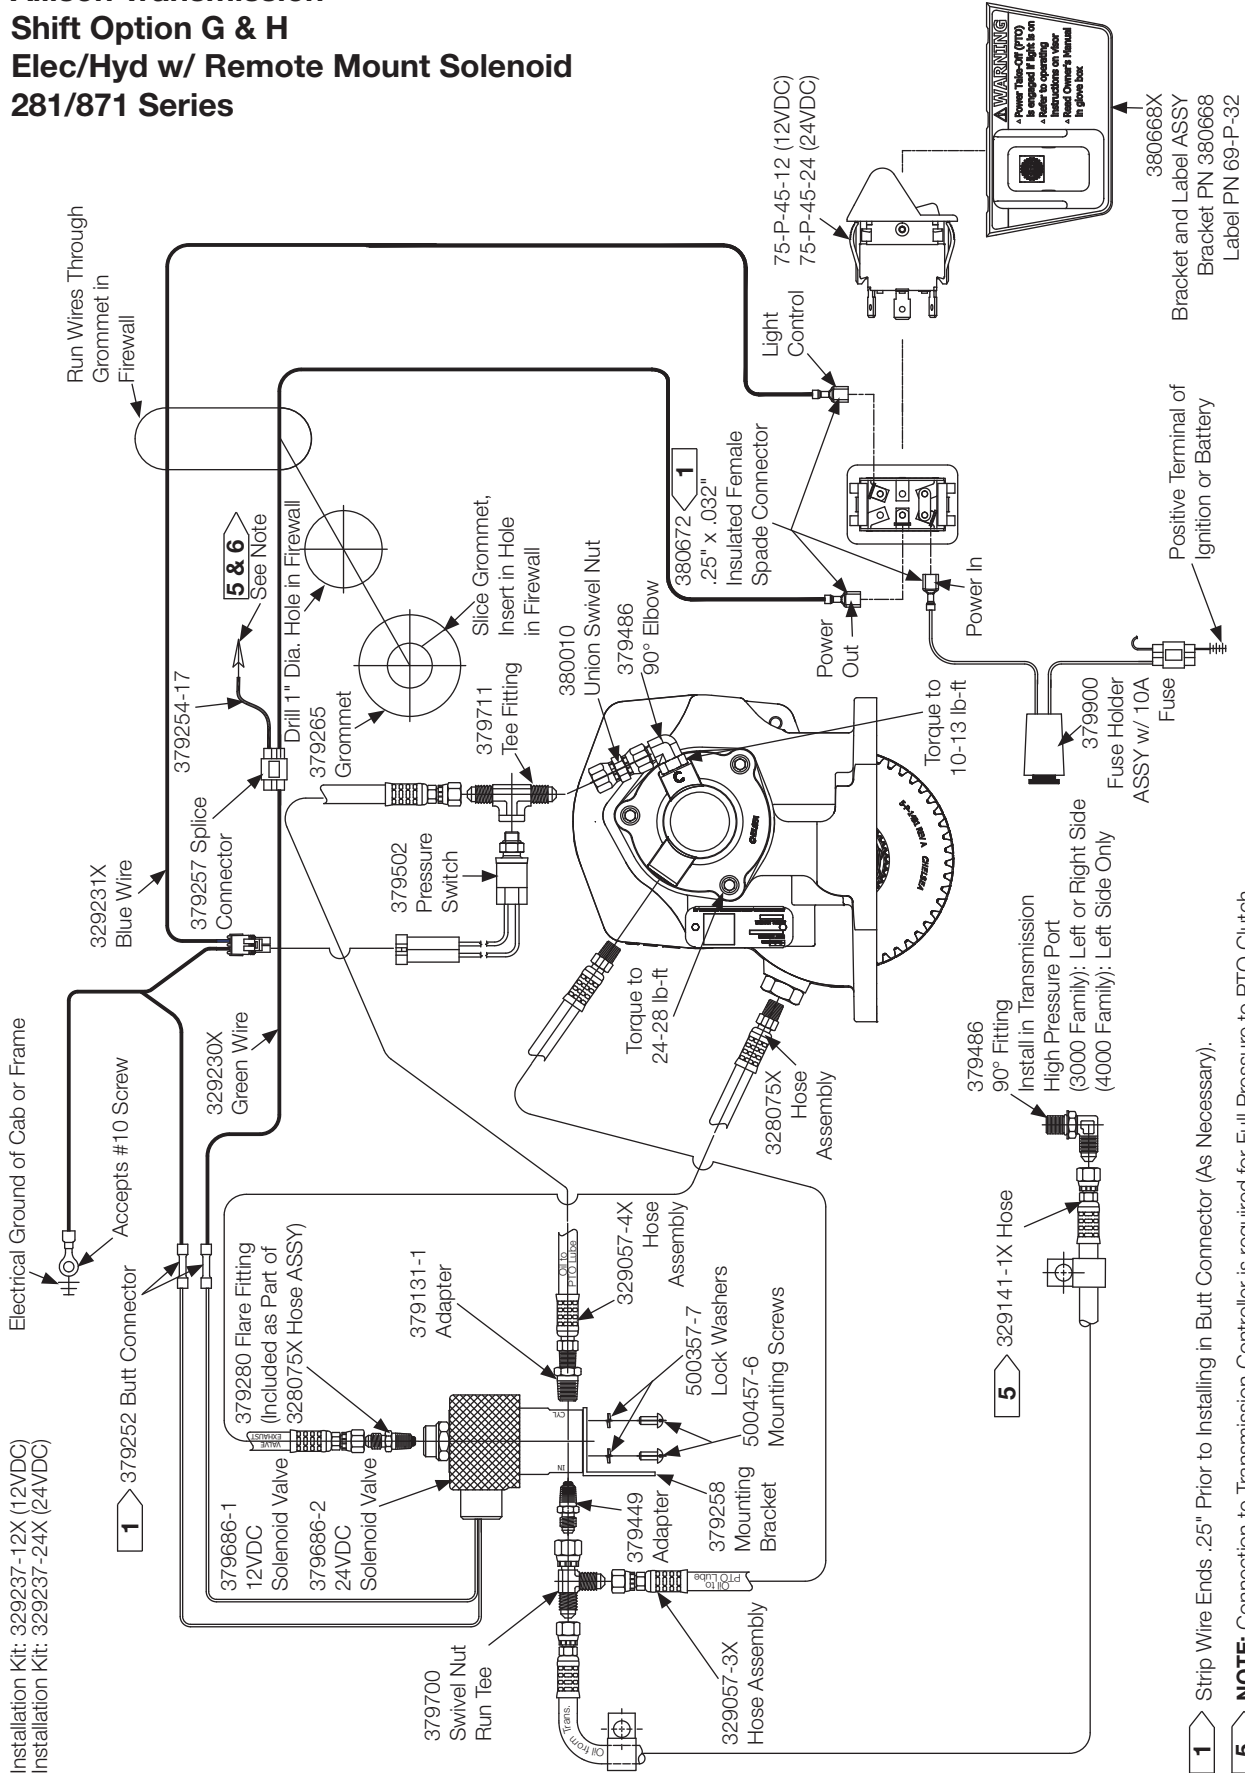


(SK-432 Rev H)

**Allison Transmission
 Shift Option S & T
 Elec/Hyd w/ PTO/Pump Combo Valve
 281 Series**

(SK-427 Rev E)

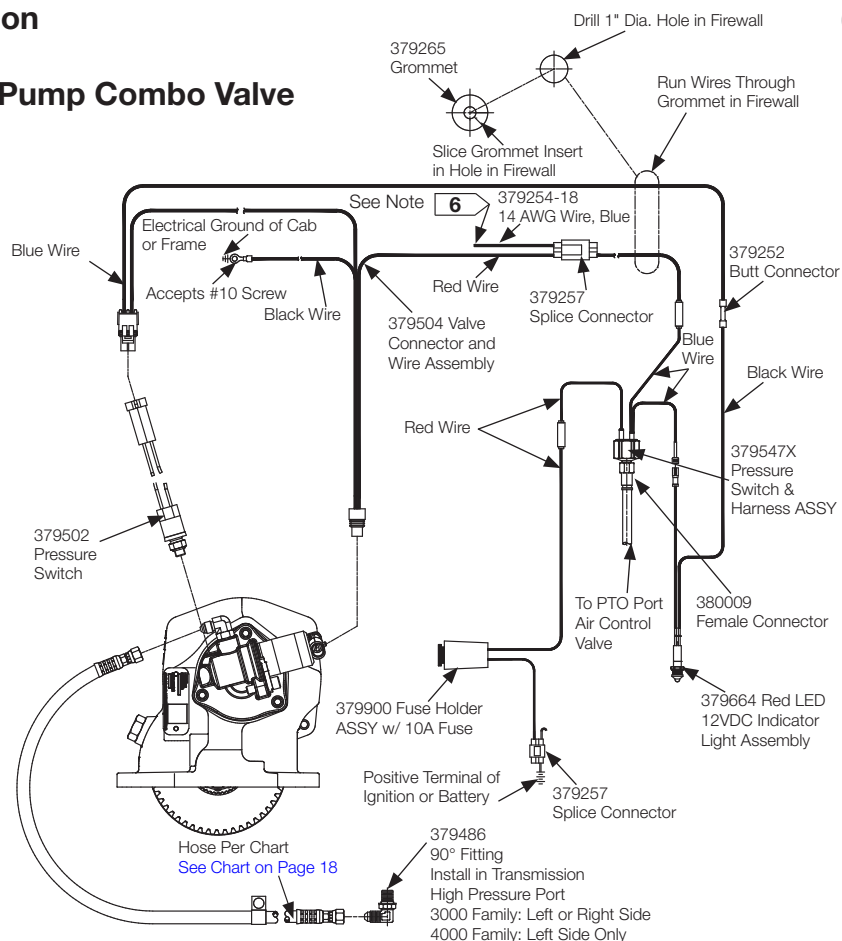

6 To maintain proper hydraulic pressure to PTO clutch, connect Chelsea specified wire to Allison "PTO Request" circuit wire/pin within transmission TCM. Location of PTO Request wire/pin is dependent on Transmission Location Code. For assistance, contact your local Allison representative or contact Allison Technical Assistance at 1-800-252-5283.

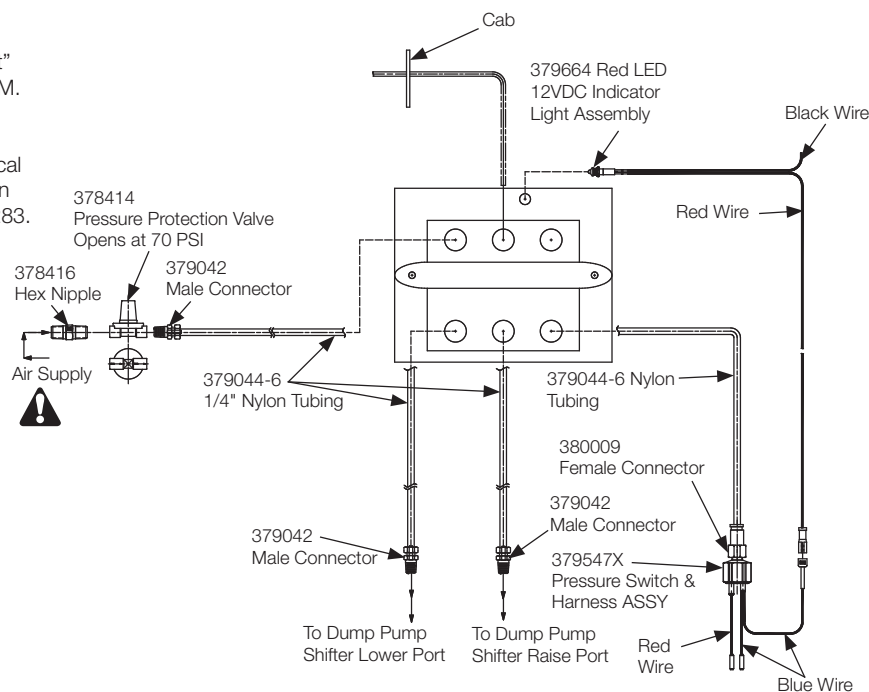

Installation Kit: (S Shift) 328388-85X
 Installation Kit: (T Shift) 328388-86X

NOTE: Air control valve must be fitted inside a waterproof housing when installed outside the driver's cab.

WARNING: Connect directly to air supply. Do not use tubing between air supply and pressure protection valve.

Caution: When installing nylon tubing avoid sharp angles, exhaust, and manifold systems.

CATERPILLAR



PTO Installation

When installing a PTO, always wear protective clothing and safety glasses.

1. Remove the PTO aperture plate with a 16 mm socket (**Fig. 30**).

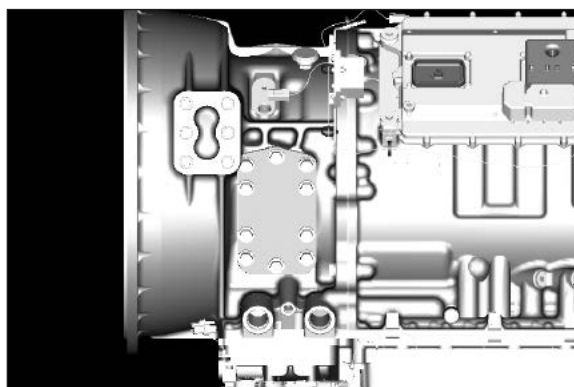


Figure 30

2. Remove the gasket and clean the aperture surface (**Fig. 31**).



Figure 31

3. Using a screwdriver, install the guide pins until they bottom out (**Fig. 32**) ([See page 35](#)).

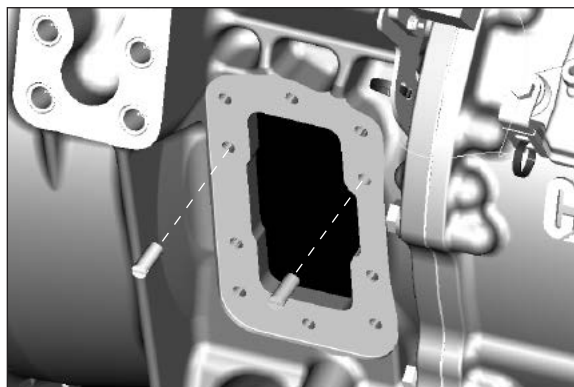


Figure 32

4. Install the special gasket over the guide pins. The ribbed surface should face outward, toward the installer (**Fig. 33**).

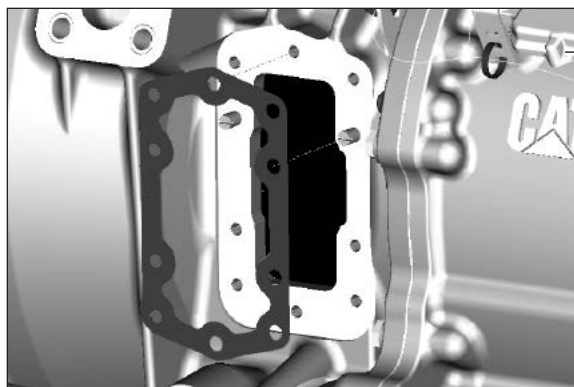


Figure 33

WARNING: Ensure all fasteners and fittings are torqued according to their manufacturer's specification.

PTO Installation (Continued)

5. Position the PTO and secure it with the top cap screw provided (**Fig. 34**).

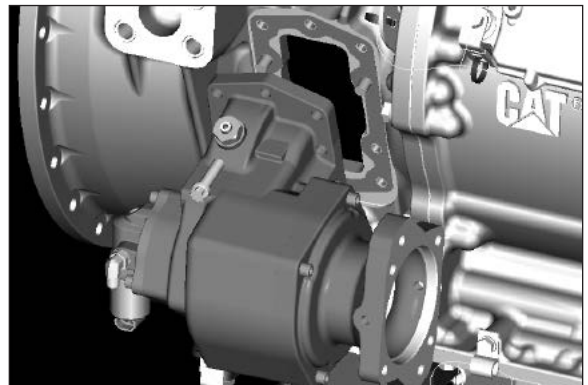


Figure 34

6. Install the remaining cap screws. Torque them to 37-44 lb-ft [50-60 N-m] (**Fig. 35**).

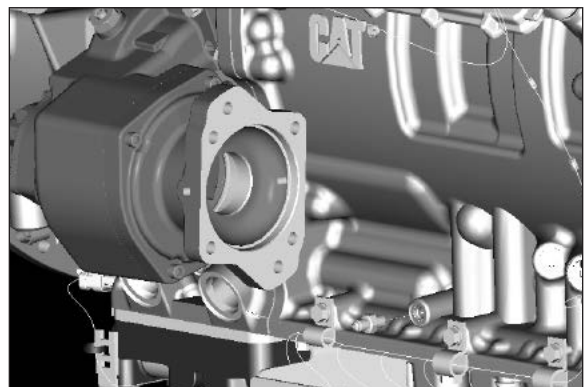


Figure 35

Installing Rotatable Flanges

The rotatable flange is shipped loose with the PTO units for ease of installation. After determining the flange position, attach the flange to the PTO bearing cap using the cap screws provided in the bag kit. After installing the cap screws make sure to torque the screws to 24-28 lb-ft [33-39 N-m]. Consideration should be taken on the size and weight of the pump being installed ([See pages 4-5](#)).

7. If installing a wet spline output, attach hose to tee fitting on output flange. If non wet spline option attach hose to fitting at PTO valve (2 flats from finger tight).

NOTE: Also [see pages 31-36](#) for Wet Spline information.

CAUTION: If not installing direct mount pump at this time install gasket, cover plate and bolts to Wet Spline output option to prevent transmission fluid from leaking out of PTO flange if truck engine is turned ON (See **Fig. 29** on [page 17](#)).

NOTE: There are two (2) high pressure ports available. Use the port located on the driver's side of the transmission unless there is an interference issue with a pump or driven object (**Fig. 36**).

8. Using the special fitting (379812) to securely attach the high pressure line to the transmission. This fitting is included with the PTO. Tighten to 8-10 lb-ft [11.0-13.5 N-m] (**Fig. 37**).

Tighten hose end fitting 2 flats from finger tight.

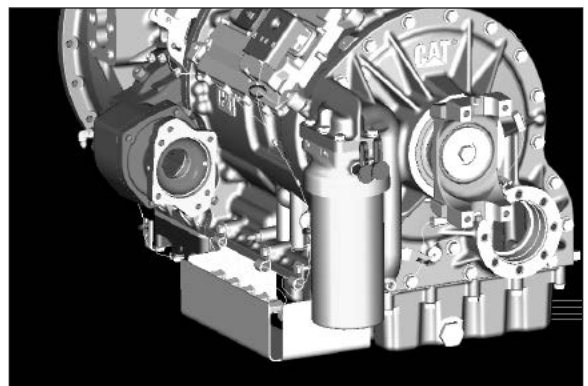


Figure 36

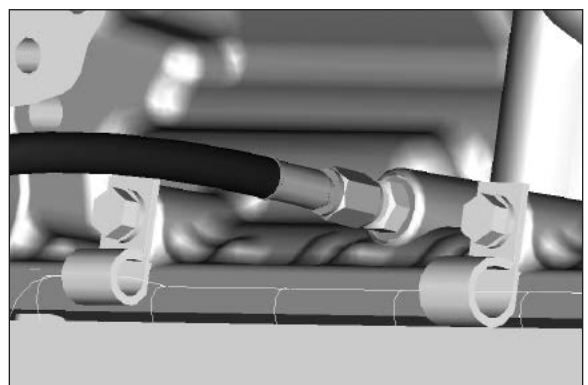


Figure 37

PTO Installation (Continued)

9. Securely attach the high pressure line to the valve. Tighten hose end fitting 2 flats from finger tight (**Fig. 38**). If Wet Spline option connect hose to tee fitting on the flange. Not available for the 288 Series Installations.

NOTE: See [pages 28-30](#) for electrical connection drawings.

10. Complete the assembly by installing the electrical connection to the valve assembly (**Fig. 39**) and the pressure switch (**Fig. 40**).

11. Reference SK-Drawings in this book for complete installation information.

NOTE: After installation is complete refill transmission with oil as per manufacture recommendation. Run PTO for approximately 5-10 minutes. Check for any unusual noise or vibration also check for leaks and/or loose fittings or fasteners. Disengage PTO and shut vehicle engine off. Repair any discrepancies found.

NOTE: If using a rotatable flange, see [page 36](#) for bolt torque.

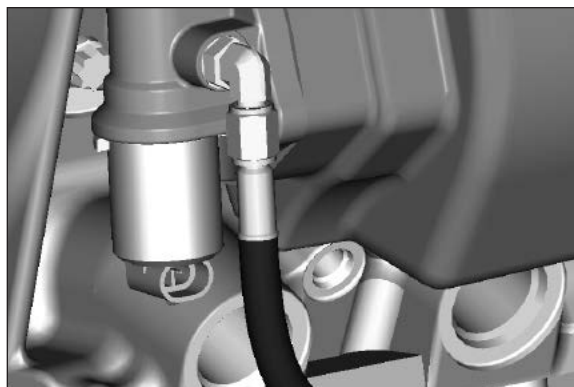


Figure 38



Figure 39



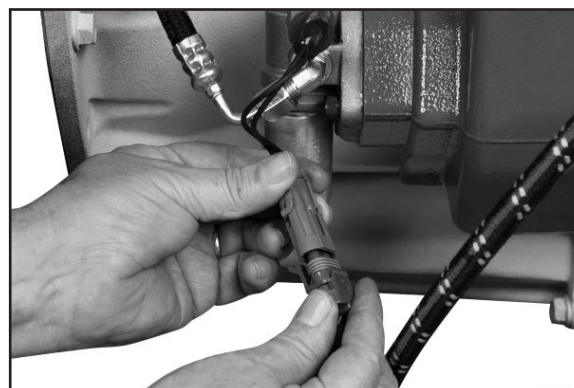


Figure 40

Pressure Port Locations & Hose Chart

(SK-414 Rev B)

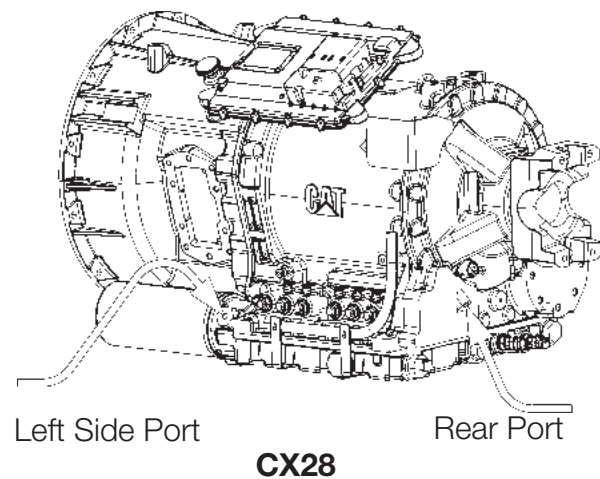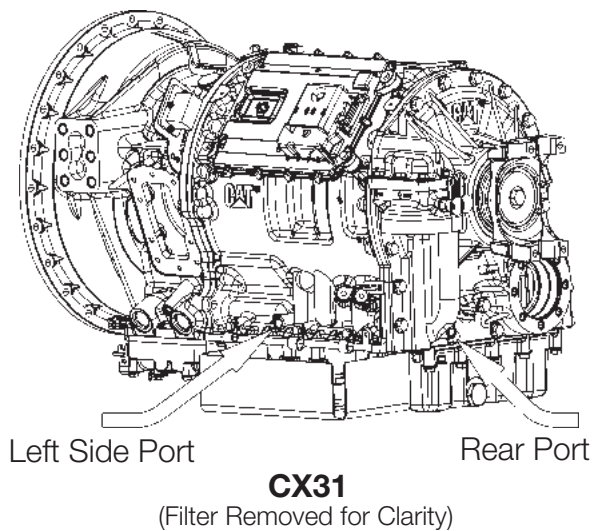

Both High Pressure Connections are -4 O-ring Boss

HOSE CHART							
Trans.	PTO	PTO Location	High Oil Pressure Location	PTO Valve Location	PTO Fitting	Trans. Fitting	Trans.-PTO Valve Hose #
CX31 CX28	281/288	Driver (LHS)	LHS	Attached	379486	379812	329075-1X
		Driver (LHS)	Rear				329075-5X
		Pass. (RHS)	LHS				329075-2X
		Pass. (RHS)	Rear			379486	329075-5X
		Driver (LHS)	LHS	Remote	379486	379812	329130-6X
		Driver (LHS)	Rear				329130-6X
		Pass. (RHS)	LHS				329130-6X
		Pass. (RHS)	Rear				329130-6X
	267	Driver (LHS)	LHS	N/A	379486	379812	329130-3X
		Driver (LHS)	Rear			379486	329075-5X
		Pass. (RHS)	LHS			379812	329075-2X
		Pass. (RHS)	Rear			379812	329075-5X
	878	Driver (LHS)	LHS	N/A	379486	379812	329130-3X
		Driver (LHS)	Rear				329075-5X
		Pass. (RHS)	LHS				329075-2X
		Pass. (RHS)	Rear			379486	329075-5X


LHS = Left Hand Side of Transmission, 8 O'clock position

RHS = Right Hand Side of Transmission, 1 O'clock position

NOTES:

- One PTO Fitting 379486 and one transmission fitting 379812 are included with the PTO unit.
If using 379486 in transmission it must be purchased separately.
- Hoses to be purchased separately, for 267 Series.
- 379486 elbow will not install on left hand (driver) side oil port due to transmission interference.
- If 379486 is listed as transmission fitting for rear location, route hose along right hand (passenger) side of transmission and under transmission output yoke.


**Caterpillar Transmission
Shift Option B & D
Elec/Hyd w/o EOC
281 Series**

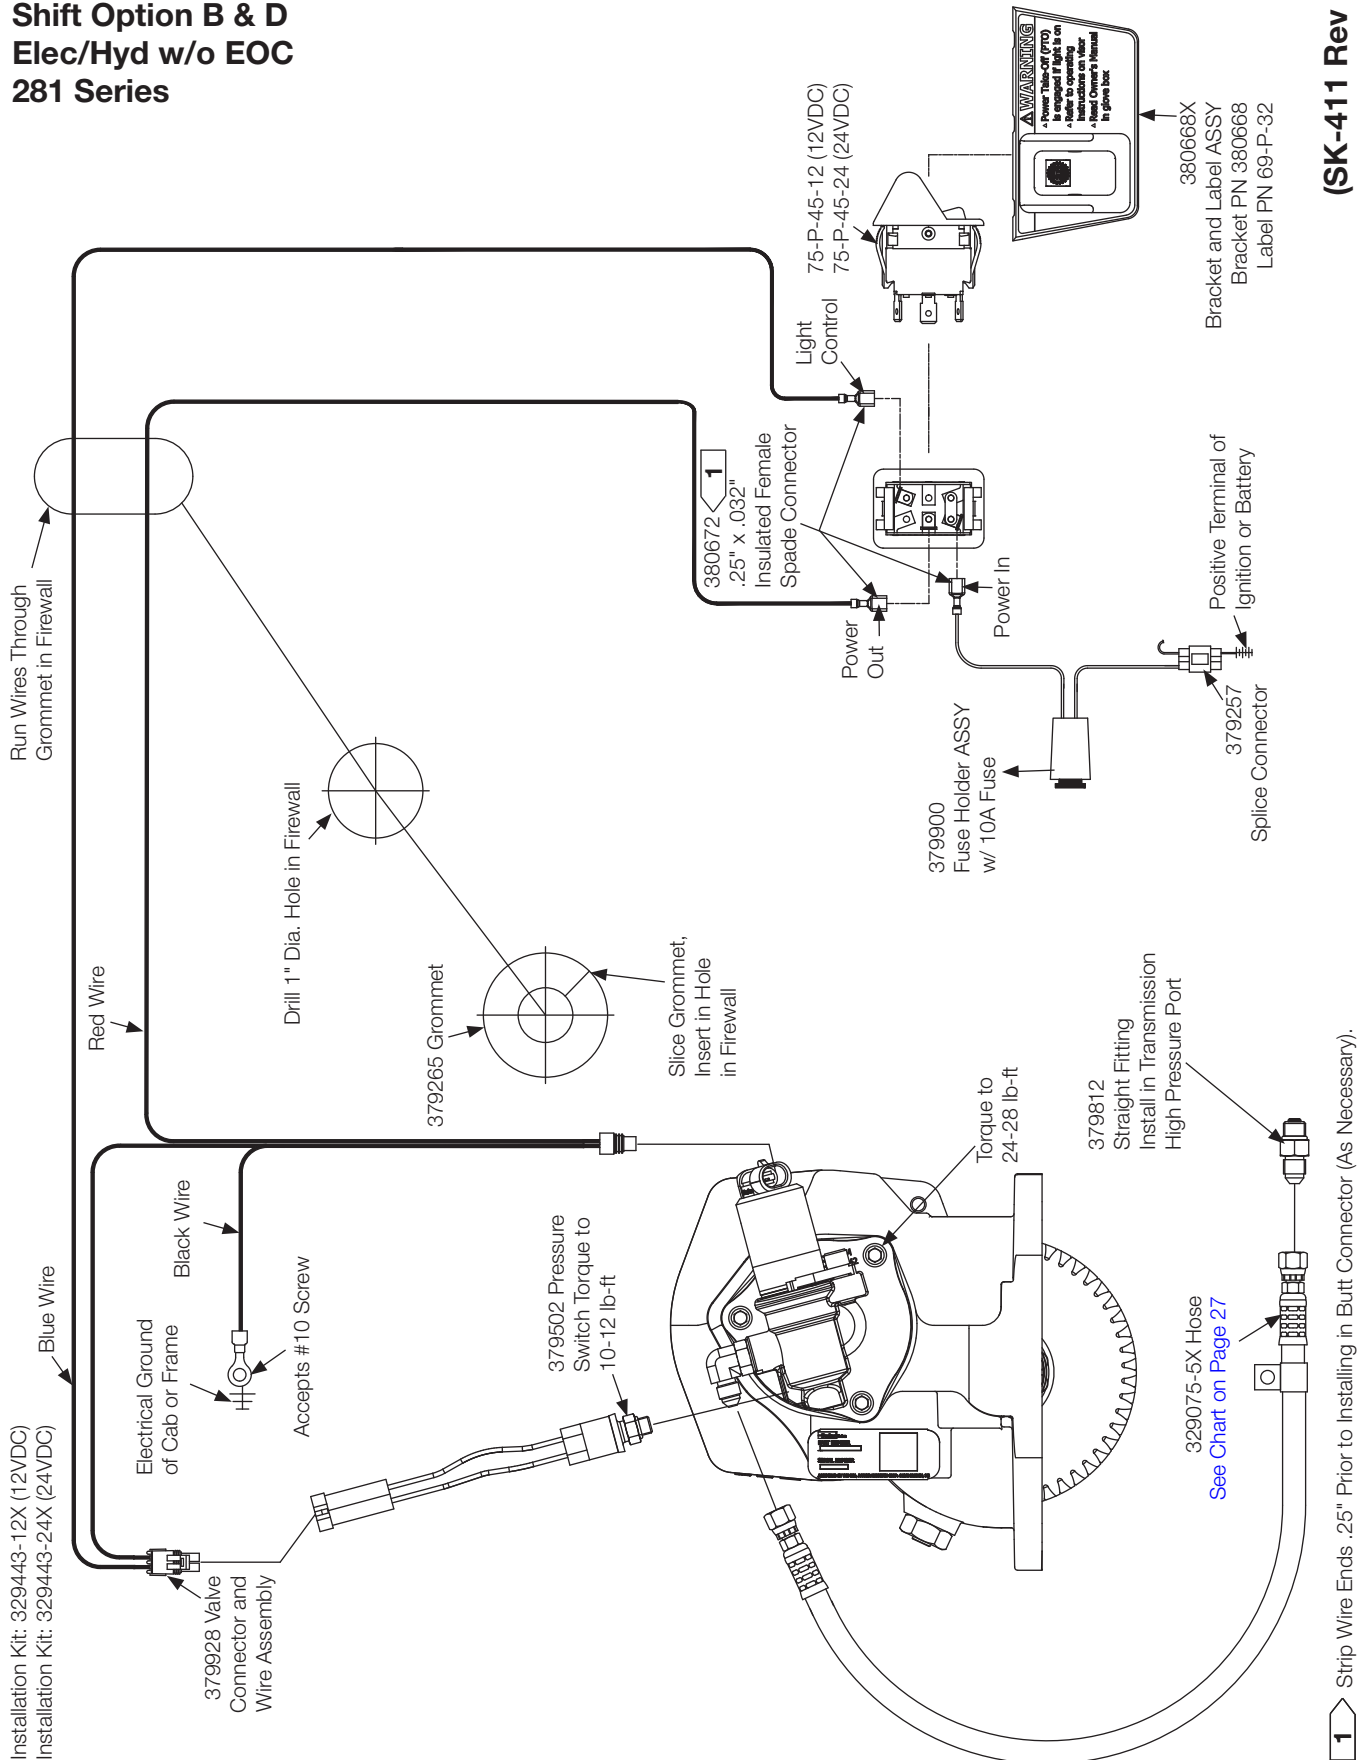

(SK-411 Rev D)

Caterpillar Transmission
Shift Option K & L
Elec/Hyd w/ EOC
281 Series

(SK-473 Rev B)

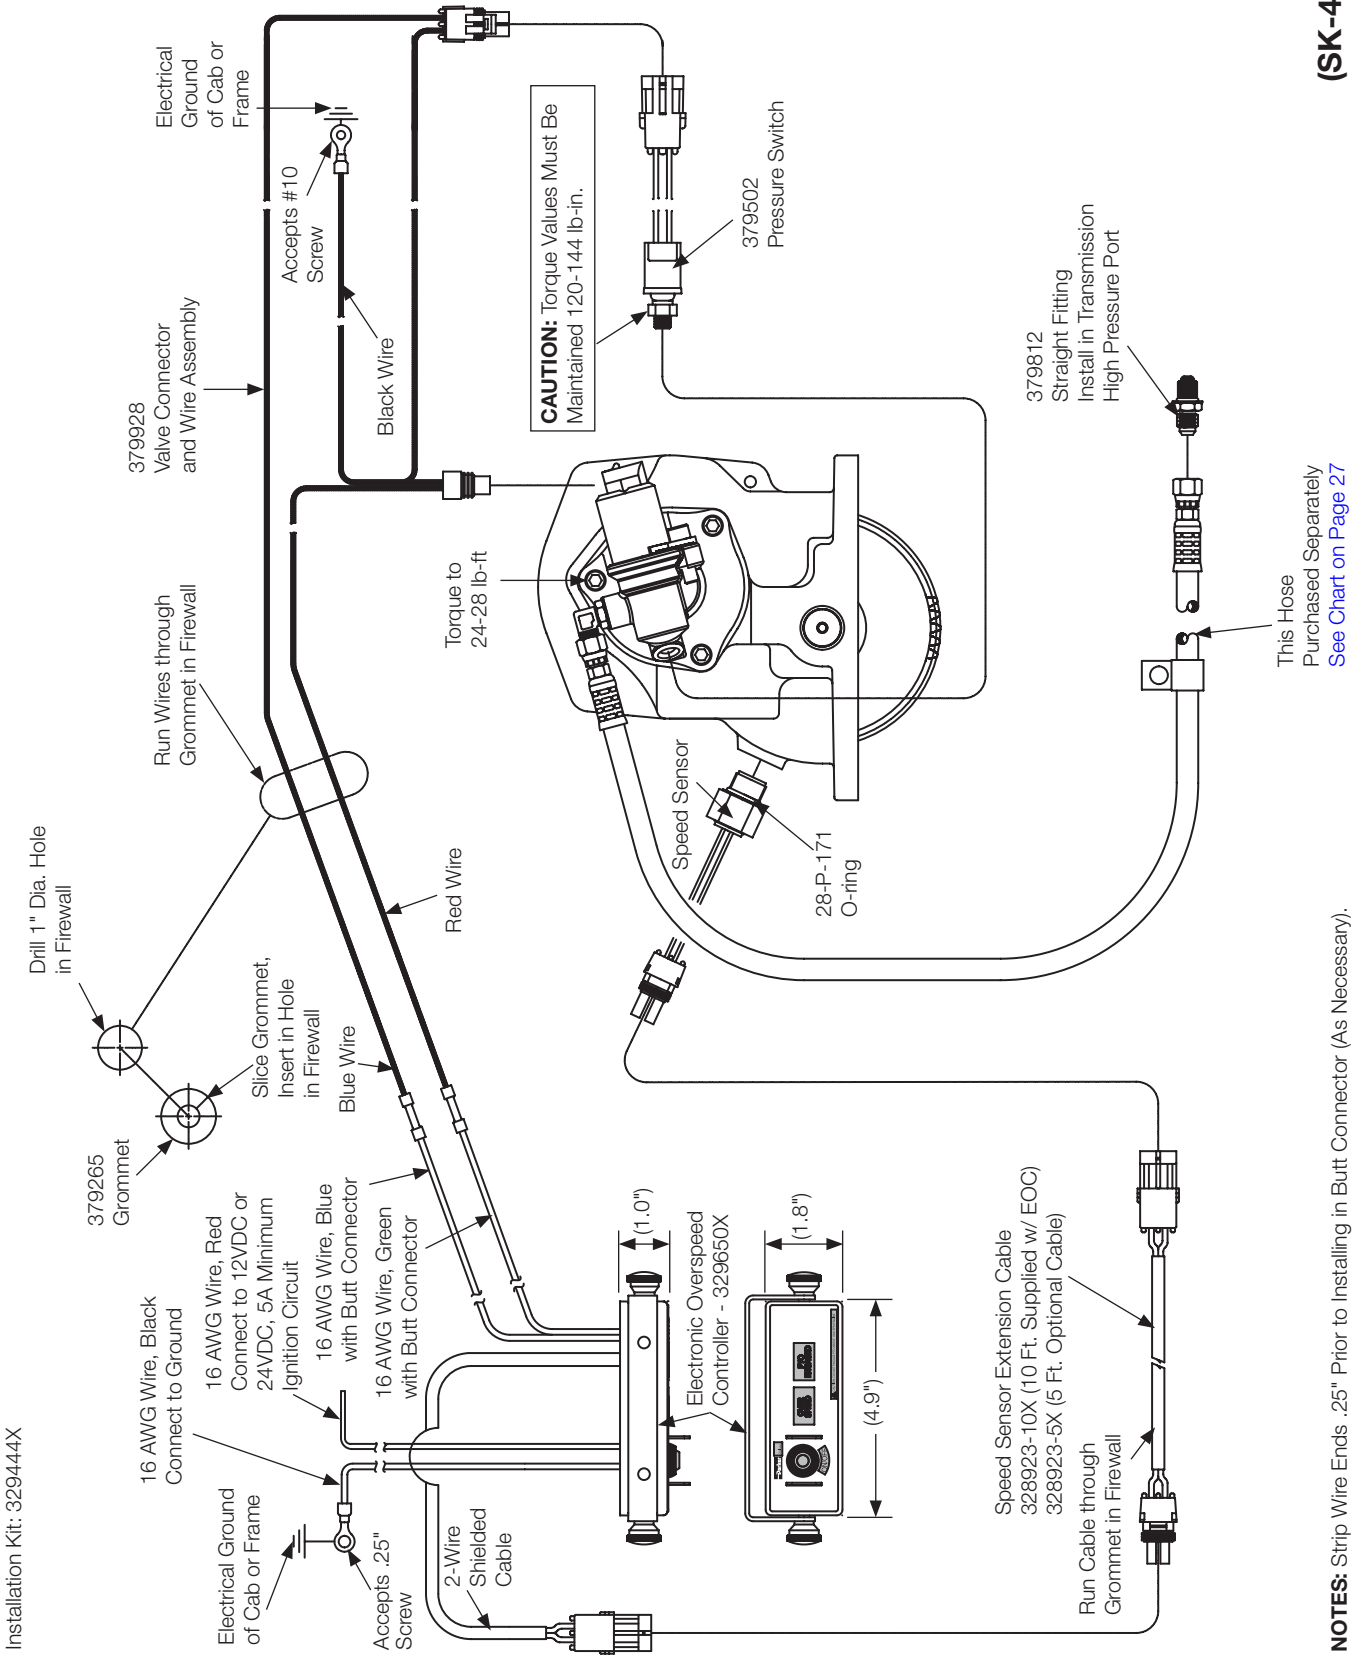

Installation Kit: 329444X

NOTES: Strip Wire Ends .25" Prior to Installing in Butt Connector (As Necessary).

CAUTION: Wet Spline options must be used with a pump that has a continuous sealing surface to ensure a proper seal between pump and PTO.

Wet Spline Installation


(SK-351 Rev C)

RY Output Option

267 Series

Install 22-P-84 gasket between PTO and Pump. Install 22-P-100 gasket between bearing cap & output flange on PTO.

Connect to transmission pressure port. Hose must be ordered separately. See hose charts on [page 27](#) for Caterpillar and [page 18](#) for Allison.

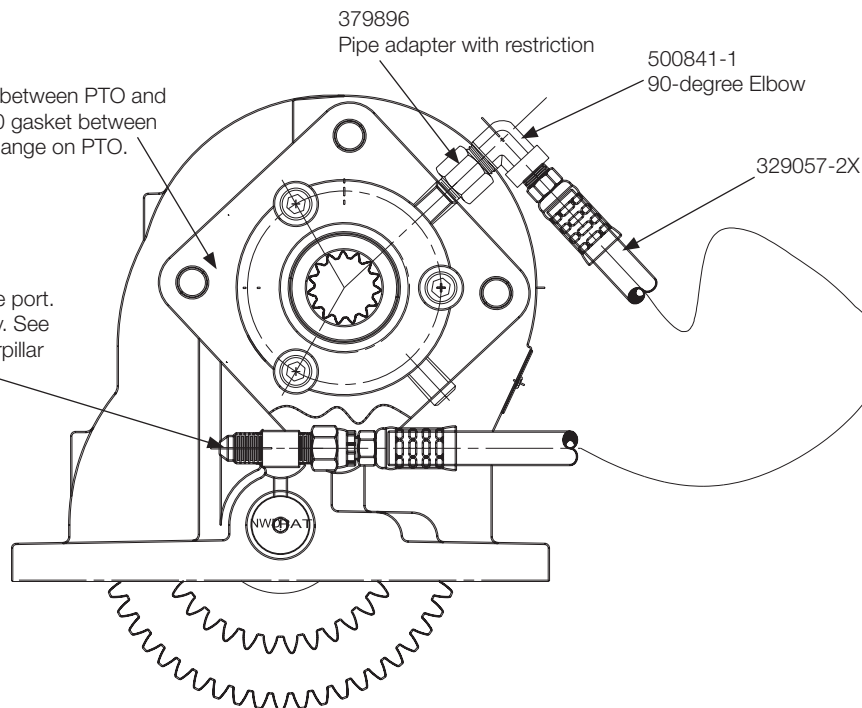

Wet Spline Installation


(SK-350 Rev D)

AF Output Option

267 Series

Install 35-P-120 gasket between PTO & Pump


Connect to transmission pressure port. Hose must be ordered separately. See hose charts on [page 27](#) for Caterpillar and [page 18](#) for Allison.

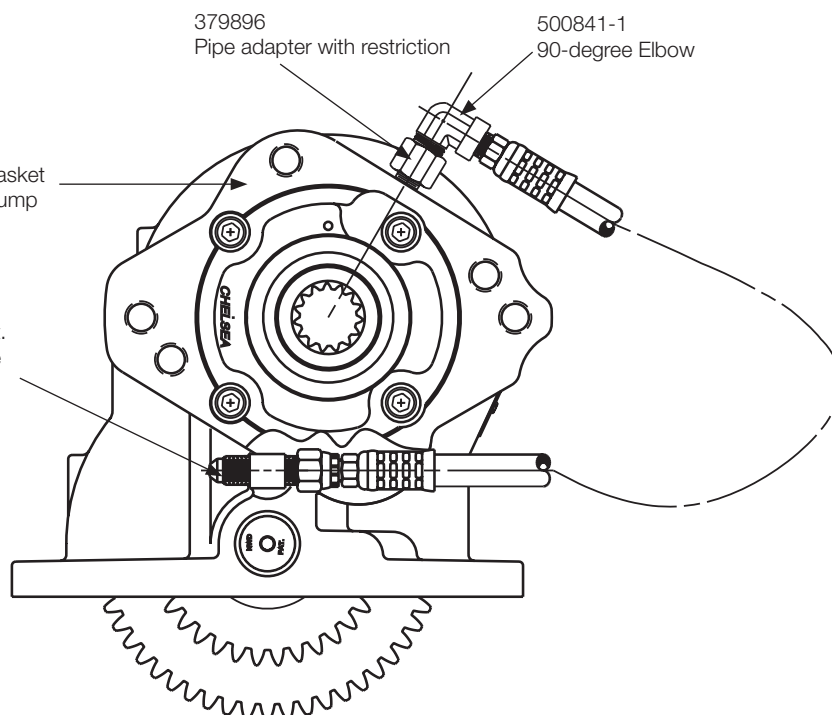

**Wet Spline Installation
RJ Output Options
267 Series**


(SK-465 Rev B)

5 ASSY View

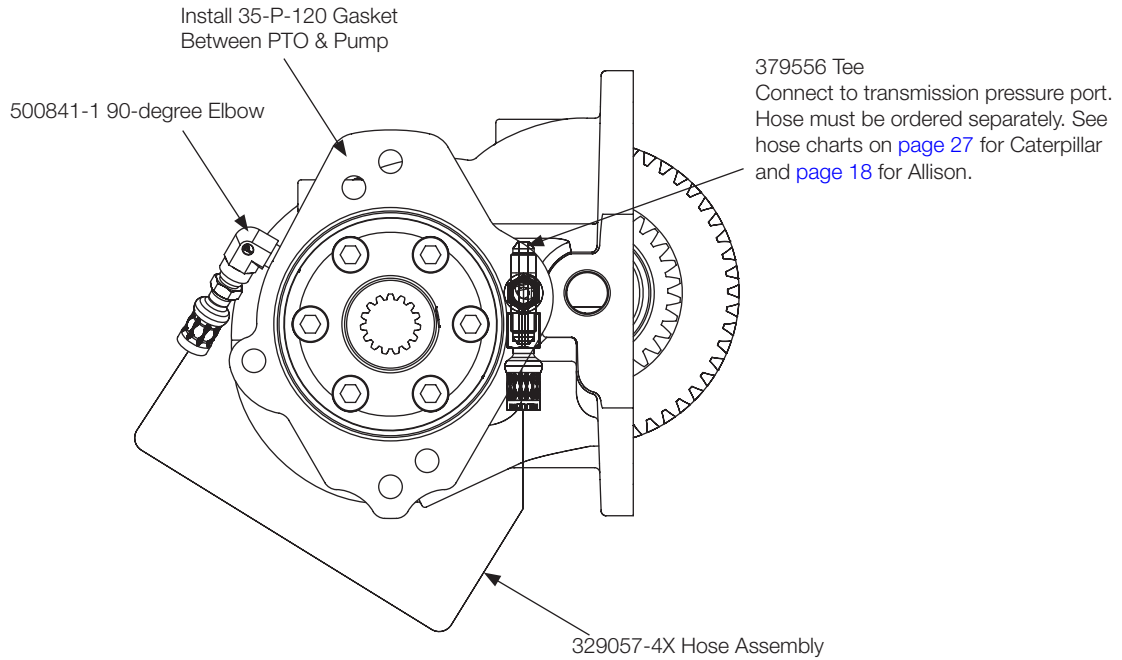

379556 Tee
Connect to transmission pressure port.
Hose must be ordered separately. See hose charts on [page 27](#) for Caterpillar and [page 18](#) for Allison.

3 ASSY View

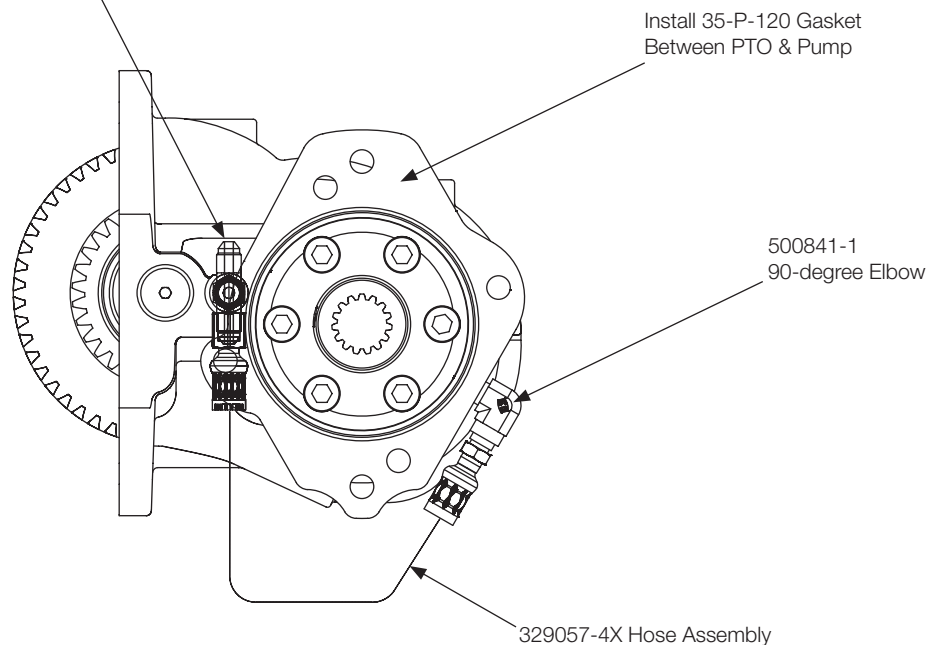


NOTES: Install Hose and Fittings Prior to Installing PTO on Transmission.

Wet Spline Installation
AK Output Options
267 Series


(SK-378 Rev A)

Wet Spline Installation Components Kit – 329406X

5 ASSY View

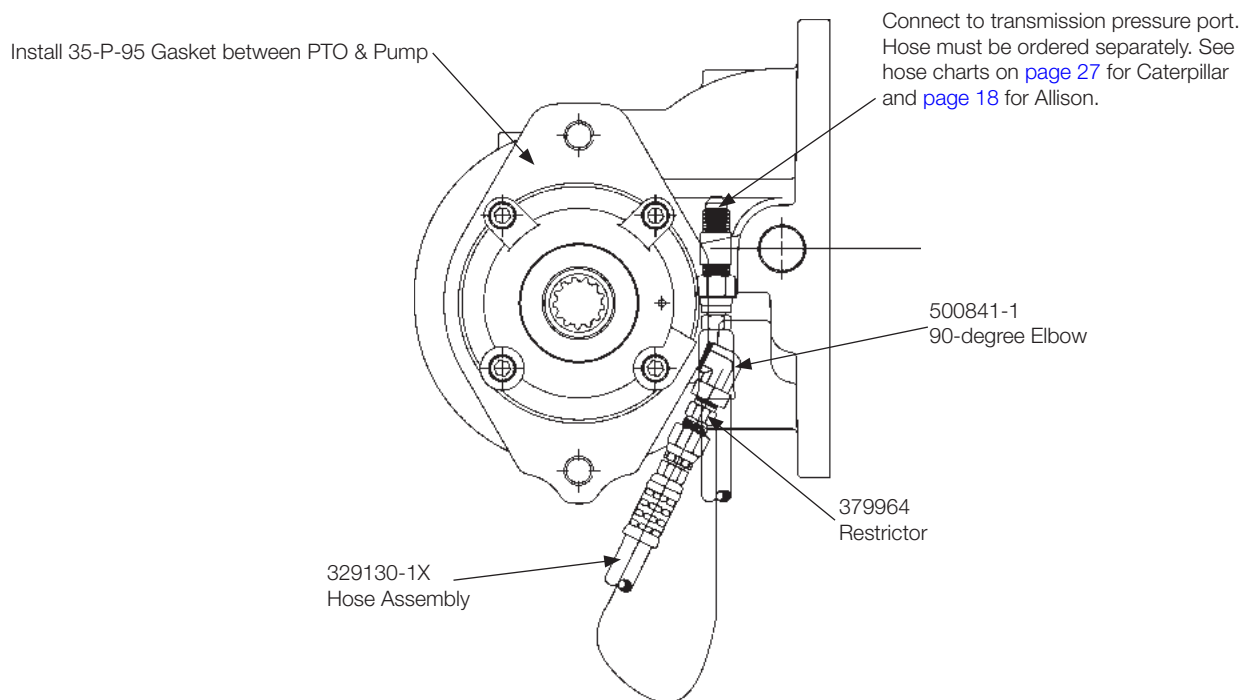


3 ASSY View

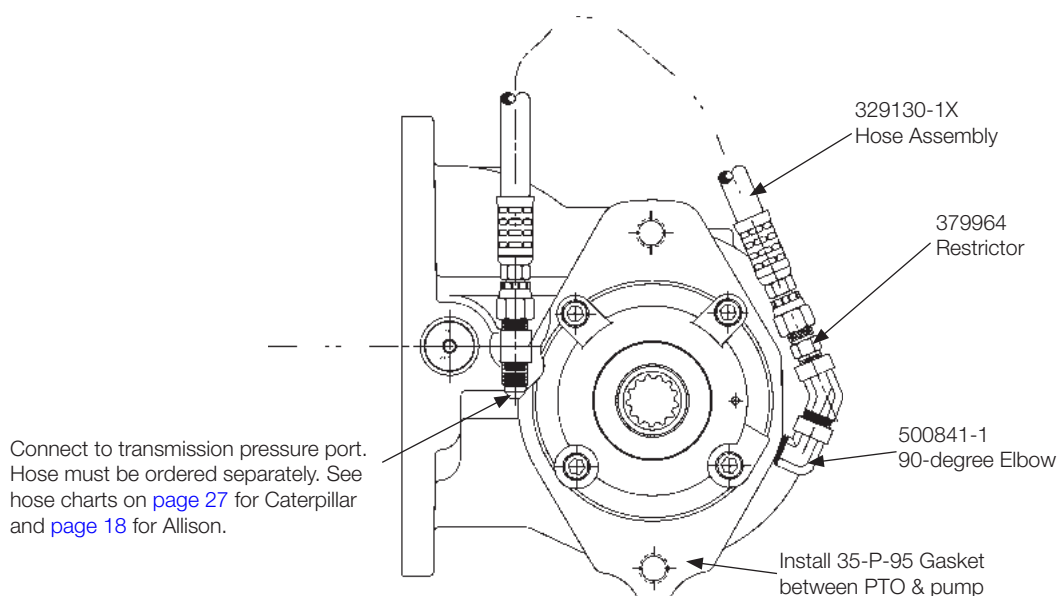


Wet Spline Installation
RB, RF, RK, RS, RY & RZ Output Options
281/288/871/878 Series

(SK-508 Rev C)

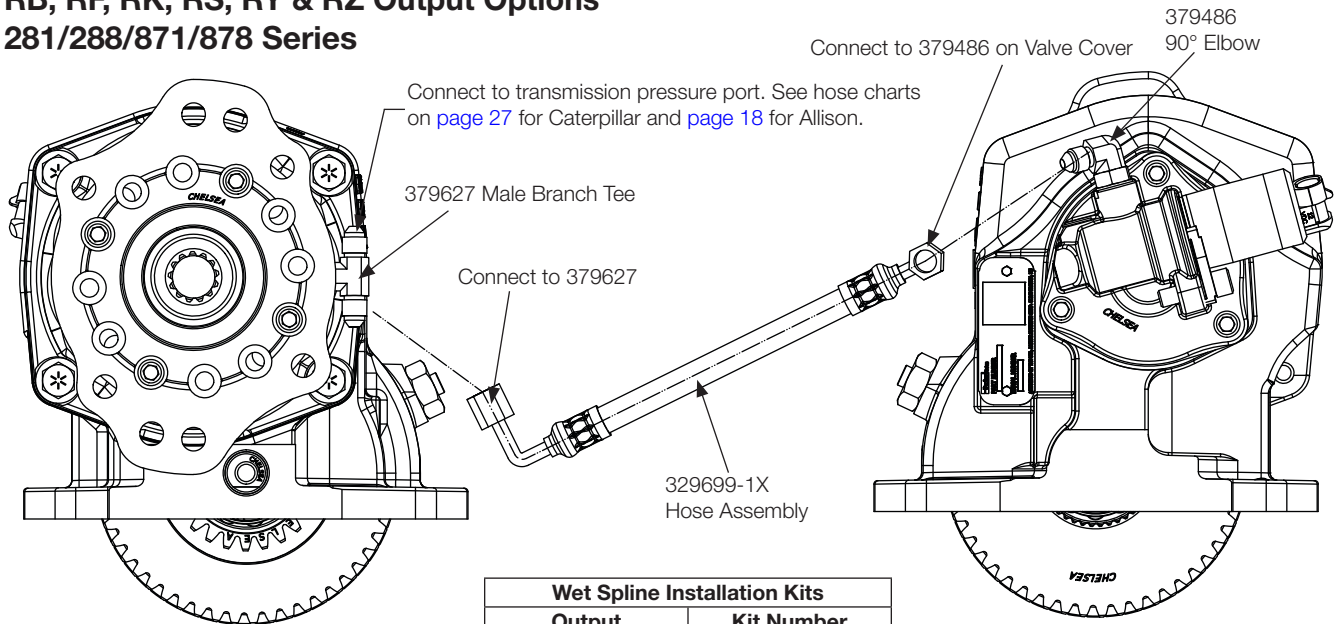

Wet Spline Installation Kits	
Output	Kit Number
RB	329959X
RK	329700X
RF	329700X
RS	329744X
RY	329742X
RZ	329700X

NOTE: Not all output options may be available on Series listed above

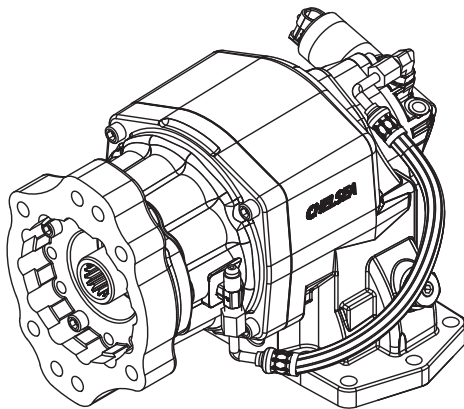


878 Series

Wet Spline Gasket or O-ring	
RB	35-P-104
RF/RK/RZ	35-P-102
RS	28-P-245
RY	35-P-111

Flange	
RB	21-P-894
RF/RK/RZ	21-P-731
RS	21-P-769
RY	21-P-771


Bearing Cap

21-P-772 (5/16" bearing cap bolt holes)
 21-P-934 (3/8" bearing cap bolt holes used w/ o-ring)
 21-P-883 (3/8" bearing cap bolt holes used w/ gasket seal)

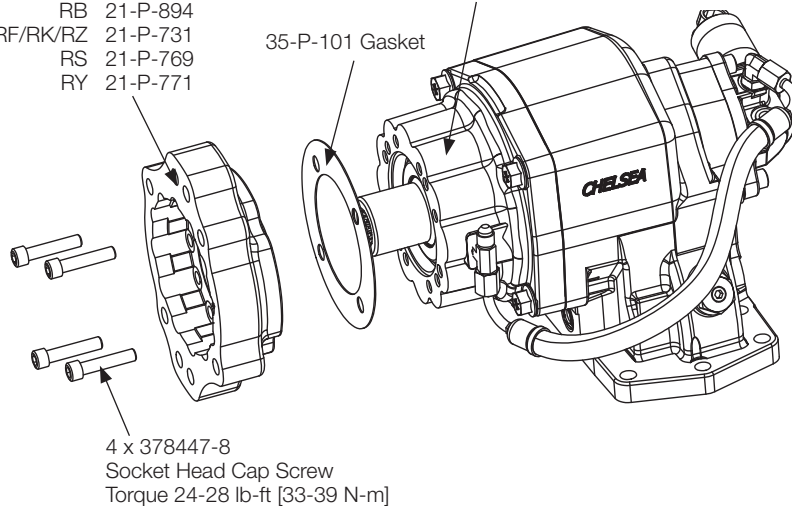

Installation Mounting Kit Instructions
267/281/871/878 Series

(SK-355 Rev E)

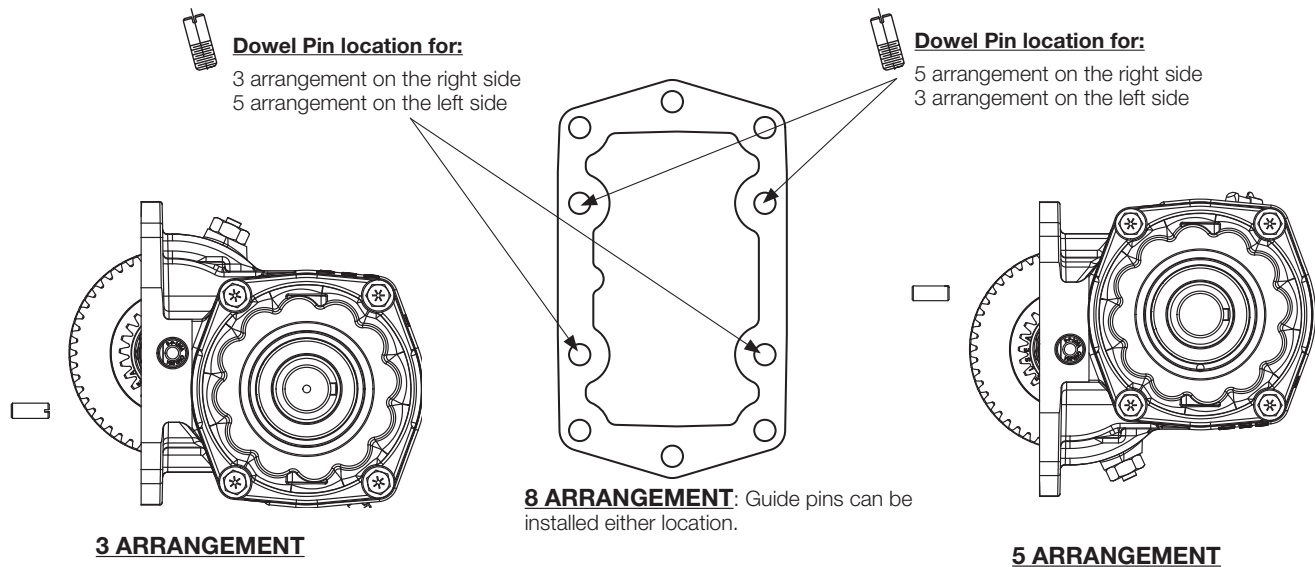

NOTE: Guide pins only to be used in these locations.


NOTE: Guide pins should be installed under the belly of the PTO in blind bolt holes.

NOTE: Models 267 guide pins cannot be removed.


NOTE: If included, install two shorter 379453-8 cap screws under barrel of PTO housing in either hole depending on housing orientation.

Installing Rotatable Flanges

The rotatable flange is shipped loose with the PTO units for ease of installation. After determining the flange position, attach the flange to the PTO bearing cap using the cap screws provided in the bag kit. After installing the cap screws make sure to torque the screws to the correct torque values stated in the Torque Chart. Consideration should be taken on the size and weight of the pump being installed.

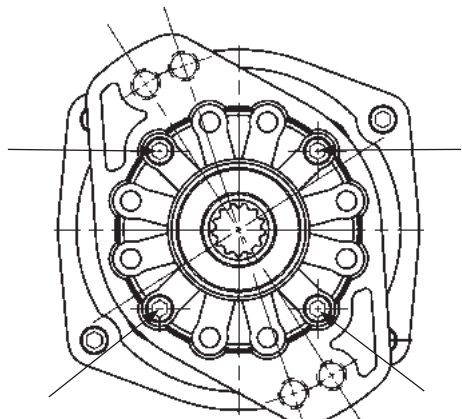

RA Flange Shown
267

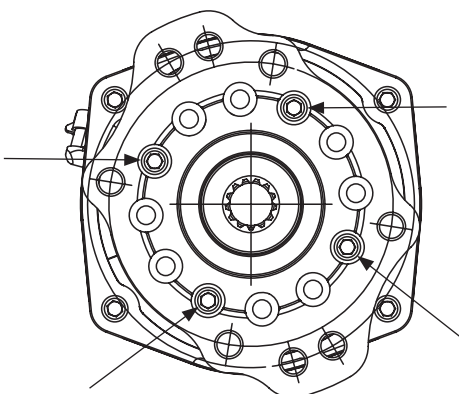

RK Flange Shown
281/288/871/878

Outputs	PTO Series	Output Flange to Bearing Cap Screw P/N	Qty.	Size Cap Screw	Cap Screw Bag Kit	Recommended Cap Screw Torque
RC, RD, RH	267	378446-4	6	0.250"-20 x 0.750"	328170-210X	8-12 lb-ft [0.9-1.4 N-m]
RA, RB, RE, RF	267	378447-6	3	0.312"-18 x 1.000"	328170-208X	24-28 lb-ft [33-39 N-m]
RB, RF, RK, RS, RY, RZ	281/288/871/878	378447-8	4	0.312"-18 x 1.500"	328170-216X	24-28 lb-ft [33-39 N-m]
RK, RY, RJ	267	379740-6	3 or 6	M10-1.50 x 0.984"	328170-218X	35-40 lb-ft [47-54 N-m]

NOTE: Reinstalling or tightening of a rotatable flange after it has become loose is not recommended. If a PTO has run for a length of time after the flange has become loose, the flange and/or bearing cap may not be to manufacturing tolerances and could cause PTO failure.

Offer of Sale

WARNING: This product can expose you to chemicals including Lead and Lead Compounds, and Di(2-ethylhexyl)phthalate (DEHP) which are known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to www.P65Warnings.ca.gov

- 1. Definitions.** As used herein, the following terms have the meanings indicated.

Buyer: means any customer receiving a Quote for Products.

Buyer's Property:

means any tools, patterns, plans, drawings, designs, specifications materials, equipment, or information furnished by Buyer, or which are or become Buyer's property.

Confidential Information:

means any technical, commercial, or other proprietary information of Seller, including, without limitation, pricing, technical drawings or prints and/or part lists, which has been or will be disclosed, delivered, or made available, whether directly or indirectly, to Buyer.

Goods: means any tangible part, system or component to be supplied by Seller.

Intellectual Property Rights:

means any patents, trademarks, copyrights, trade dress, trade secrets or similar rights.

Products: means the Goods, Services and/or Software as described in a Quote.

Quote: means the offer or proposal made by Seller to Buyer for the supply of Products.

Seller: means Parker-Hannifin Corporation, all divisions, subsidiaries and businesses selling products under these terms.

Seller's IP: means patents, trademarks, copyrights, or other intellectual property rights relating to the Products, including without limitation, names, designs, images, drawings, models, software, templates, information, any improvements or creations or other intellectual property developed prior to or during the relationship contemplated herein.

Services: means any services to be provided by Seller.

Software: means any software related to the Goods, whether embedded or separately downloaded.

Special Tooling:

means equipment acquired by Seller or otherwise owned by Seller necessary to manufacture Goods, including but not limited to tools, jigs, and fixtures.

Terms: means the terms and conditions of this Offer of Sale.

- 2. Terms.** All sales of Products by Seller will be governed by, and are expressly conditioned upon Buyer's assent to, these Terms. These Terms are incorporated into any Quote provided by Seller to Buyer. Buyer's order for any Products whether communicated to Seller verbally, in writing, by electronic data interface or other electronic commerce, shall constitute acceptance of these Terms. Seller objects to any contrary or additional terms or conditions of Buyer. Reference in Seller's order acknowledgement to Buyer's purchase order or purchase order number shall in no way constitute an acceptance of any of Buyer's terms or conditions of purchase. Any Quote made by Seller to Buyer shall be considered a firm and definite offer and shall not be deemed to be otherwise despite any language on the face of the Quote. Seller reserves all rights to accept or reject any purported acceptance by Buyer to Seller's Quote if such purported acceptance attempts to vary the terms of the Quote. If Seller ships Products after Buyer issues an acceptance to the Quote, any additional or different terms proposed by Buyer will not become part of the parties' business relationship unless agreed to in a writing that is signed by an authorized representative of Seller, excluding email correspondence. If the transaction proceeds without such agreement on the part of Seller, the business relationship will be

governed solely by these Terms and the specific terms in Seller's Quote.

3. Price; Payment. The Products set forth in the Quote are offered for sale at the prices indicated in the Quote. Unless otherwise specifically stated in the Quote, prices are valid for thirty (30) days and do not include any sales, use, or other taxes or duties. Seller reserves the right to modify prices for any reason and at any time by giving ten (10) days prior written notice. Unless otherwise specified by Seller, all prices are F.C.A. Seller's facility (INCOTERMS 2020). All sales are contingent upon credit approval and full payment for all purchases is due thirty (30) days from the date of invoice (or such date as may be specified in the Quote). Under any circumstances, Buyer may not withhold or suspend payment of any amounts due and payable as a deduction, set-off or recoupment of any amount, claim or dispute with Seller. Unpaid invoices beyond the specified payment date incur interest at the rate of 1.5% per month or the maximum allowable rate under applicable law. Seller reserves the right to require advance payment or provision of securities for first and subsequent deliveries if there is any doubt, in Seller's sole determination, regarding the Buyer's creditworthiness or for other business reasons. If the requested advance payment or securities are not provided to Seller's satisfaction, Seller reserves the right to suspend performance or reject the purchase order, in whole or in part, without prejudice to Seller's other rights or remedies, including the right to full compensation. Seller may revoke or shorten any payment periods previously granted in Seller's sole determination. The rights and remedies herein reserved to Seller are cumulative and in addition to any other or further rights and remedies available at law or in equity. No waiver by Seller of any breach by Buyer of any provision of these terms will constitute a waiver by Seller of any other breach of such provision.

4. Shipment; Delivery; Title and Risk of Loss. All delivery dates are approximate, and Seller is not responsible for damages or additional costs resulting from any delay. All deliveries are subject to our ability to procure materials from our suppliers. Regardless of the manner of shipment, delivery occurs and title and risk of loss or damage pass to Buyer, upon placement of the Products with the carrier at Seller's facility. Unless otherwise agreed prior to shipment and for domestic delivery locations only, Seller will select and arrange, at Buyer's sole expense, the carrier and means of delivery. When Seller selects and arranges the carrier and means of delivery, freight and insurance costs for shipment to the designated delivery location will be prepaid by Seller and added as a separate line item to the invoice. Buyer shall be responsible for any additional shipping charges incurred by Seller due to Buyer's acts or omissions. Buyer shall not return or repack any Products without the prior written authorization from Seller, and any return shall be at the sole cost and expense of Buyer.

5. Warranty. The warranty for the Products is as follows:

(i) Seller warrants that all products sold conform to the applicable Parker Chelsea standard specification for the lesser period of 2 years (24 Months) from date of service or 2-1/2 years (30 Months) from date of build (as marked on the product name plate); (ii) Services shall be performed in accordance with generally accepted practices and using the degree of care and skill that is ordinarily exercised and customary in the field to which the Services pertain and are warranted for a period of six (6) months from the date of completion of the Services; and (iii) Software is only warranted to perform in accordance with applicable specifications provided by Seller to Buyer for ninety (90) days from the date of delivery or, when downloaded by a Buyer or end-user, from the date of the initial download. All prices are based upon the exclusive limited warranty stated above, and upon the following disclaimer:

EXEMPTION CLAUSE; DISCLAIMER OF WARRANTY, CONDITIONS, REPRESENTATIONS: THIS WARRANTY IS THE SOLE AND ENTIRE WARRANTY, CONDITION, AND REPRESENTATION, PERTAINING TO PRODUCTS. SELLER

Continued on Next Page

Offer of Sale (Continued)

DISCLAIMS ALL OTHER WARRANTIES, CONDITIONS, AND REPRESENTATIONS, WHETHER STATUTORY, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO THOSE RELATING TO DESIGN, NONINFRINGEMENT, MERCHANTABILITY, AND FITNESS FOR A PARTICULAR PURPOSE. SELLER DOES NOT WARRANT THAT THE SOFTWARE IS ERROR-FREE OR FAULT-TOLERANT, OR THAT BUYER'S USE THEREOF WILL BE SECURE OR UNINTERRUPTED, UNLESS OTHERWISE AUTHORIZED IN WRITING BY SELLER, THE SOFTWARE SHALL NOT BE USED IN CONNECTION WITH HAZARDOUS OR HIGH-RISK ACTIVITIES OR ENVIRONMENTS. EXCEPT AS EXPRESSLY STATED HEREIN, ALL PRODUCTS ARE PROVIDED "AS IS".

6. Claims; Commencement of Actions. Buyer shall promptly inspect all Products upon receipt. No claims for shortages will be allowed unless reported to Seller within ten (10) days of delivery. Buyer shall notify Seller of any alleged breach of warranty within thirty (30) days after the date the non-conformance is or should have been discovered by Buyer. Any claim or action against Seller based upon breach of contract or any other theory, including tort, negligence, or otherwise must be commenced within twelve (12) months from the date of the alleged breach or other alleged event, without regard to the date of discovery.

7. LIMITATION OF LIABILITY. IN THE EVENT OF A BREACH OF WARRANTY, SELLER WILL, AT ITS OPTION, REPAIR OR REPLACE THE NON-CONFORMING PRODUCTS, REPERFORM THE SERVICES, OR REFUND THE PURCHASE PRICE PAID WITHIN A REASONABLE PERIOD OF TIME. IN NO EVENT IS SELLER LIABLE FOR ANY SPECIAL, INDIRECT, INCIDENTAL OR CONSEQUENTIAL DAMAGES INCLUDING ANY LOSS OF REVENUE OR PROFITS, WHETHER BASED IN CONTRACT, TORT OR OTHER LEGAL THEORY. IN NO EVENT SHALL SELLER'S LIABILITY UNDER ANY CLAIM MADE BY BUYER EXCEED THE PURCHASE PRICE PAID FOR THE PRODUCTS.

8. Confidential Information. Buyer acknowledges and agrees that Confidential Information has been and will be received in confidence and will remain the property of Seller. Buyer further agrees that it will not use Seller's Confidential Information for any purpose other than for the benefit of Seller and shall return all such Confidential Information to Seller within thirty (30) days upon request.

9. Loss to Buyer's Property. Buyer's Property will be considered obsolete and may be destroyed by Seller after two (2) consecutive years have elapsed without Buyer ordering the Products manufactured using Buyer's Property. Also, Seller shall not be responsible for any loss or damage to Buyer's Property while it is in Seller's possession or control.

10. Special Tooling. Seller may impose a tooling charge for any Special Tooling. Special Tooling shall be and remain Seller's property. In no event will Buyer acquire any interest in the Special Tooling, even if such Special Tooling has been specially converted or adapted for manufacture of Goods for Buyer and notwithstanding any charges paid by Buyer. Unless otherwise agreed, Seller has the right to alter, discard or otherwise dispose of any Special Tooling or other property owned by Seller in its sole determination at any time.

11. Security Interest. To secure payment of all sums due from Buyer, Seller retains a security interest in all Products delivered to Buyer and, Buyer's acceptance of these Terms is deemed to be a Security Agreement under the Uniform Commercial Code. Buyer authorizes Seller as its attorney to execute and file on Buyer's behalf all documents Seller deems necessary to perfect Seller's security interest.

12. User Responsibility. Buyer, through its own analysis and testing, is solely responsible for making the final selection of the Products and assuring that all performance, endurance, maintenance, safety and warning requirements of the application of the Products are met. Buyer must analyze all aspects of the application and follow applicable industry standards, specifications, and any technical information provided with the Quote or the Products, such as Seller's instructions, guides and specifications. If Seller provides options of or for Products based upon data

or specifications provided by Buyer, Buyer is responsible for determining that such data and specifications are suitable and sufficient for all applications and reasonably foreseeable uses of the Products. In the event Buyer is not the end-user of the Products, Buyer will ensure such end-user complies with this paragraph.

13. Use of Products, Indemnity by Buyer. Buyer shall comply with all instructions, guides and specifications provided by Seller with the Quote or the Products. If Buyer uses or resells the Products in any way prohibited by Seller's instructions, guides or specifications, or Buyer otherwise fails to comply with Seller's instructions, guides and specifications, Buyer acknowledges that any such use, resale, or non-compliance is at Buyer's sole risk. Further, Buyer shall indemnify, defend, and hold Seller harmless from any losses, claims, liabilities, damages, lawsuits, judgments and costs (including attorney fees and defense costs), whether for personal injury, property damage, intellectual property infringement or any other claim, arising out of or in connection with: (a) improper selection, design, specification, application, or any misuse of Products; (b) any act or omission, negligent or otherwise, of Buyer; (c) Seller's use of Buyer's Property; (d) damage to the Products from an external cause, repair or attempted repair by anyone other than Seller, failure to follow instructions, guides and specifications provided by Seller, use with goods not provided by Seller, or opening, modifying, deconstructing, tampering with or repackaging the Products; or (e) Buyer's failure to comply with these Terms, including any legal or administrative proceedings, collection efforts, or other actions arising from or relating to such failure to comply. Seller shall not indemnify Buyer under any circumstance except as otherwise provided in these Terms.

14. Cancellations and Changes. Buyer may not cancel or modify, including but not limited to movement of delivery dates for the Products, any order for any reason except with Seller's written consent and upon terms that will indemnify, defend and hold Seller harmless against all direct, incidental and consequential loss or damage and any additional expense. Seller, at any time, may change features, specifications, designs and availability of Products.

15. Assignment. Buyer may not assign its rights or obligations without the prior written consent of Seller.

16. Force Majeure. Seller is not liable for delay or failure to perform any of its obligations by reason of any events or circumstances beyond its reasonable control. Such circumstances include without limitation: accidents, labor disputes or stoppages, government acts or orders, acts of nature, pandemics, epidemics, other widespread illness, or public health emergency, cyber related disruptions, cyber-attacks, ransomware sabotage, delays or failures in delivery from carriers or suppliers, shortages of materials, sudden increases in the price of raw material or components, shutdowns or slowdowns affecting the supply of raw materials or components, or the transportation thereof, oil shortages or oil price increases, energy crisis, energy or fuel interruption, war (whether declared or not) or the serious threat of same, riots, rebellions, acts of terrorism, embargoes, fire or any reason whether similar to the foregoing or otherwise. Seller will resume performance as soon as practicable after the event of force majeure has been removed. All delivery dates affected by an event of force majeure shall be tolled for the duration of such event of force majeure and rescheduled for mutually agreed dates as soon as practicable after the event of force majeure ceases to exist. The right to allocate capacity is in the Seller's sole discretion. An event of force majeure shall not include financial distress, insolvency, bankruptcy, or other similar conditions affecting one of the parties, affiliates and/or subcontractors. An event of force majeure in the meaning of these Terms means any circumstances beyond Seller's control that permanently or temporarily hinders performance, even where that circumstance was already foreseen. Buyer shall not be entitled to cancel any orders following its claim of an event of force majeure.

17. Waiver and Severability. Failure to enforce any provision of these Terms will not invalidate that provision; nor will any such

Continued on Next Page

Offer of Sale (Continued)

WARNING: This product can expose you to chemicals including Lead and Lead Compounds, and Di(2-ethylhexyl)phthalate (DEHP) which are known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to www.P65Warnings.ca.gov

failure prejudice either party's right to enforce that provision in the future. Invalidation of any provision of these Terms shall not invalidate any other provision herein and, the remaining provisions will remain in full force and effect.

18. Duration. Unless otherwise stated in the Quote, any agreement governed by or arising from these Terms shall: (a) be for an initial duration of one (1) year; and (b) shall automatically renew for successive one-year terms unless terminated by Buyer with at least 180-days written notice to Seller or if Seller terminates the agreement pursuant to Section 19 of these Terms.

19. Termination. Seller may, without liability to Buyer, terminate any agreement governed by or arising from these Terms for any reason and at any time by giving Buyer thirty (30) days prior written notice. Seller may immediately terminate, in writing, if Buyer: (a) breaches any provision of these Terms, (b) becomes or is deemed insolvent, (c) appoints or has appointed a trustee, receiver or custodian for all or any part of Buyer's property, (d) files a petition for relief in bankruptcy on its own behalf, or one is filed against Buyer by a third party, (e) makes an assignment for the benefit of creditors; or (f) dissolves its business or liquidates all or a majority of its assets.

20. Ownership of Rights. Buyer agrees that (a) Seller (and/or its affiliates) owns or is the valid licensee of Seller's IP and (b) the furnishing of information, related documents or other materials by Seller to Buyer does not grant or transfer any ownership interest or license in or to Seller's IP to Buyer, unless expressly agreed in writing. Without limiting the foregoing, Seller retains ownership of all Software supplied to Buyer. In no event shall Buyer obtain any greater right in and to the Software than a right in a license limited to the use thereof and subject to compliance with any other terms provided with the Software. Buyer further agrees that it will not, directly or through intermediaries, reverse engineer, decompile, or disassemble any Software (including firmware) comprising or contained within a Product, except and only to the extent that such activity may be expressly permitted, either by applicable law or, in the case of open-source software, the applicable open-source license.

21. Indemnity for Infringement of Intellectual Property Rights.

Seller is not liable for infringement of any Intellectual Property Rights except as provided in this Section. Seller will defend at its expense and will pay the cost of any settlement or damages awarded in an action brought against Buyer based on a third-party claim that one or more of the Products infringes the Intellectual Property Rights of a third party in the country of delivery of the Products by Seller to Buyer. Seller's obligation to defend and indemnify Buyer is contingent on Buyer notifying Seller within ten (10) days after Buyer becomes aware of any such claim, and Seller having sole control over the defense of the claim including all negotiations for settlement or compromise. If one or more Products is subject to such a claim, Seller may, at its sole expense and option, procure for Buyer the right to continue using the Products, replace or modify the Products to render them non-infringing, or offer to accept return of the Products and refund the purchase price less a reasonable allowance for depreciation. Seller has no obligation or liability for any claim of infringement: (i) arising from information provided by Buyer (including Seller's use of Buyer's Property); or (ii) directed to any Products for which the designs are specified in whole or part by Buyer; or (iii) resulting from the modification, combination or use in a system of any Products. The foregoing provisions of this Section constitute Seller's sole and exclusive liability and Buyer's sole and exclusive remedy for claims of infringement of Intellectual Property Rights.

22. Governing Law. These Terms, the terms of any Quote, and the sale and delivery of all Products are deemed to have taken place in, and shall be governed and construed in accordance with, the laws of the State of Ohio, as applicable to contracts executed and wholly performed therein and without regard to conflicts of laws principles. Buyer irrevocably agrees and consents to the exclusive jurisdiction and venue of the courts of Cuyahoga County, Ohio with respect to any dispute, controversy or claim arising out of or relating to the sale

and delivery of the Products.

23. Entire Agreement. These Terms, along with the terms set forth in the Quote, forms the entire agreement between the Buyer and Seller and constitutes the final, complete and exclusive expression of the terms of sale and purchase. In the event of a conflict between any term set forth in the Quote and these Terms, the terms set forth in the Quote shall prevail. All prior or contemporaneous written or oral agreements or negotiations with respect to the subject matter shall have no effect. No modification to these Terms will be binding on Seller unless agreed to in a writing that is signed by an authorized representative of Seller, excluding email correspondence, 'clickwrap' or other purported electronic assent to different or additional terms. Sections 2-25 of these Terms shall survive termination or cancellation of any agreement governed by or arising from these Terms.

24. No 'Wrap' Agreements/No Authority to Bind. Seller's clicking any buttons or any similar action, such as clicking "I Agree" or "Confirm," to utilize Buyer's software or webpage for the placement of orders, is NOT an agreement to Buyer's Terms and Conditions. **NO EMPLOYEE, AGENT OR REPRESENTATIVE OF SELLER HAS THE AUTHORITY TO BIND SELLER BY THE ACT OF CLICKING ANY BUTTON OR SIMILAR ACTION ON BUYER'S WEBSITE OR PORTAL.**

25. Compliance with Laws. Buyer agrees to comply with all applicable laws, regulations, and industry and professional standards, including those of the United States of America, and the country or countries in which Buyer may operate, including without limitation the U.S. Foreign Corrupt Practices Act ("FCPA"), the U.S. Anti-Kickback Act ("Anti-Kickback Act"), U.S. and E.U. export control and sanctions laws ("Export Laws"), the U.S. Food Drug and Cosmetic Act ("FDCA"), and the rules and regulations promulgated by the U.S. Food and Drug Administration ("FDA"), each as currently amended. Buyer agrees to indemnify, defend, and hold harmless Seller from the consequences of any violation of such laws, regulations and standards by Buyer, its employees or agents. Buyer represents that it is familiar with all applicable provisions of the FCPA, the Anti-Kickback Act, Export Laws, the FDCA and the FDA and certifies that Buyer will adhere to the requirements thereof and not take any action that would make Seller violate such requirements. Buyer represents and agrees that Buyer will not make any payment or give anything of value, directly or indirectly, to any governmental official, foreign political party or official thereof, candidate for foreign political office, or commercial entity or person, for any improper purpose, including the purpose of influencing such person to purchase Products or otherwise benefit the business of Seller. Buyer further represents and agrees that it will not receive, use, service, transfer or ship any Products from Seller in a manner or for a purpose that violates Export Laws or would cause Seller to be in violation of Export Laws. Buyer agrees to promptly and reliably provide Seller all requested information or documents, including end-user statements and other written assurances, concerning Buyer's ongoing compliance with Export Law.

09/22

Parker Worldwide

Europe, Middle East, Africa

AE – United Arab Emirates,
Dubai

Tel: +971 4 8127100
parker.me@parker.com

AT – Austria, Wiener Neustadt

Tel: +43 (0)2622 23501-0
parker.austria@parker.com

AT – Eastern Europe, Wiener
Neustadt

Tel: +43 (0)2622 23501 900
parker.easteurope@parker.com

AZ – Azerbaijan, Baku

Tel: +994 50 22 33 458
parker.azerbaijan@parker.com

BE/LU – Belgium, Nivelles

Tel: +32 (0)67 280 900
parker.belgium@parker.com

BG – Bulgaria, Sofia

Tel: +359 2 980 1344
parker.bulgaria@parker.com

BY – Belarus, Minsk

Tel: +375 17 209 9399
parker.belarus@parker.com

CH – Switzerland, Etoy

Tel: +41 (0)21 821 87 00
parker.switzerland@parker.com

CZ – Czech Republic, Klecany

Tel: +420 284 083 111
parker.czechrepublic@parker.com

DE – Germany, Kaarst

Tel: +49 (0)2131 4016 0
parker.germany@parker.com

DK – Denmark, Ballerup

Tel: +45 43 56 04 00
parker.denmark@parker.com

ES – Spain, Madrid

Tel: +34 902 330 001
parker.spain@parker.com

FI – Finland, Vantaa

Tel: +358 (0)20 753 2500
parker.finland@parker.com

FR – France, Contamine s/Arve

Tel: +33 (0)4 50 25 80 25
parker.france@parker.com

GR – Greece, Athens

Tel: +30 210 933 6450
parker.greece@parker.com

HU – Hungary, Budaoers

Tel: +36 23 885 470
parker.hungary@parker.com

IE – Ireland, Dublin

Tel: +353 (0)1 466 6370
parker.ireland@parker.com

IT – Italy, Corisico (MI)

Tel: +39 02 45 19 21
parker.italy@parker.com

KZ – Kazakhstan, Almaty

Tel: +7 7273 561 000
parker.easteurope@parker.com

NL – The Netherlands, Oldenzaal

Tel: +31 (0)541 585 000
parker.nl@parker.com

NO – Norway, Asker

Tel: +47 66 75 34 00
parker.norway@parker.com

PL – Poland, Warsaw

Tel: +48 (0)22 573 24 00
parker.poland@parker.com

PT – Portugal, Leca de Palmeira

Tel: +351 22 999 7360
parker.portugal@parker.com

RO – Romania, Bucharest

Tel: +40 21 252 1382
parker.romania@parker.com

RU – Russia, Moscow

Tel: +7 495 645-2156
parker.russia@parker.com

SE – Sweden, Spånga

Tel: +46 (0)8 59 79 50 00
parker.sweden@parker.com

SK – Slovakia, Banská Bystrica

Tel: +421 484 162 252
parker.slovakia@parker.com

SL – Slovenia, Novo Mesto

Tel: +386 7 337 6650
parker.slovenia@parker.com

TR – Turkey, Istanbul

Tel: +90 216 4997081
parker.turkey@parker.com

UA – Ukraine, Kiev

Tel: +380 44 494 2731
parker.ukraine@parker.com

UK – United Kingdom, Warwick

Tel: +44 (0)1926 317 878
parker.uk@parker.com

ZA – South Africa, Kempton Park

Tel: +27 (0)11 961 0700
parker.southafrica@parker.com

North America

CA – Canada, Milton, Ontario

Tel: +1 905 693 3000

MX – Mexico, Toluca

Tel: +52 72 2275 4200

Asia Pacific

AU – Australia, Castle Hill

Tel: +61 (0)2-9634 7777

CN – China, Shanghai

Tel: +86 21 2899 5000

HK – Hong Kong

Tel: +852 2428 8008

IN – India, Mumbai

Tel: +91 22 6513 7081-85

JP – Japan, Fujisawa

Tel: +81 (0)4 6635 3050

KR – South Korea, Seoul

Tel: +82 2 559 0400

MY – Malaysia, Shah Alam

Tel: +60 3 7849 0800

NZ – New Zealand, Mt Wellington

Tel: +64 9 574 1744

SG – Singapore

Tel: +65 6887 6300

TH – Thailand, Bangkok

Tel: +662 717 8140

TW – Taiwan, New Taipei City

Tel: +886 2 2298 8987

South America

AR – Argentina, Buenos Aires

Tel: +54 3327 44 4129

BR – Brazil, Cachoeirinha RS

Tel: +55 51 3470 9144

CL – Chile, Santiago

Tel: +56 2 623 1216

Pan Am, Miami

Tel: +1 305-470-8800

Parker-Hannifin Corporation

Chelsea Products Division
8225 Hacks Cross Rd
Olive Branch, MS 38654
United States

Phone: +1 (662) 895-1011

Email: chd_support@support.parker.com

www.Parker.com/Chelsea

PN: HY25-1380-M1/US

Rev: 08/24

